


PL 1.1 КРЫШКИ

Item	Part	Description
1	2N1525	FRONT DOOR (USO/XCL)
-	2N1566	FRONT DOOR (XE)
2	-	OUTPUT TRAY (USO/XCL) (REP 14.7)
3	-	SCREW (3X8)
4	50N259	TRAY EXTENSION (XE)
-	50N230	TRAY EXTENSION (USO/XCL)
5	-	SCREW (4X12)
6	-	CONTROL CONSOLE (REP 14.5)
7	152N1630	CONTROL CONSOLE HARNESS
8	152N1637	HARNESS
9	-	SCREW (3X8)
10	-	TOP LEFT COVER
11	-	INSTRUCTION LABEL
12	90N138	DOCUMENT GLASS ASSEMBLY (USO/XCL) (REP 6.1)
-	90N139	(XE) (REP 6.1)
-	90N140	(XD155DF) (REP6.1)
13	-	REGISTRATION GUIDE
14	1N299	CALIBRATION STRIP
15	-	ADHESIVE STRIP
16	-	DOCUMENT GLASS
17	2N1561	TOP RIGHT COVER (XD120F,XD103F,XD105F)
-	2N1591	TOP RIGHT COVER (XD155DF) (XD100,XD102,XD104) (NOT SPARED)
-	2N1576	(XD120F) (XE)
18	2N1560	REAR COVER (XD155DF)
-	2N1574	(XD103F, XD120F) (XE)
-	-	(XD100,XD102,XD104, XD105F) (NOT SPARED)
19	-	CAUTION LABEL
20	-	LABEL
21	-	SERVICE LABEL
22	-	FAN GASKET
23	53N142	OZONE FILTER
24	1N300	DOCUMENT GLASS EDGE
25	62N147	SDF WINDOW (XD120F,XD103F,XD105F)
26	4N193	SDF GLASS CUSHION (XD120F,XD103F,XD105F)
27	-	SMALL REAR COVER (XD120F,XD103F,XD105F)
28	38N274	REAR SHIELD (XD155DF)
29	38N275	FRONT SHIELD (XD155DF)
30	38N276	CUSHION (XD155DF)
31	63N65	TAPE (XD155DF)


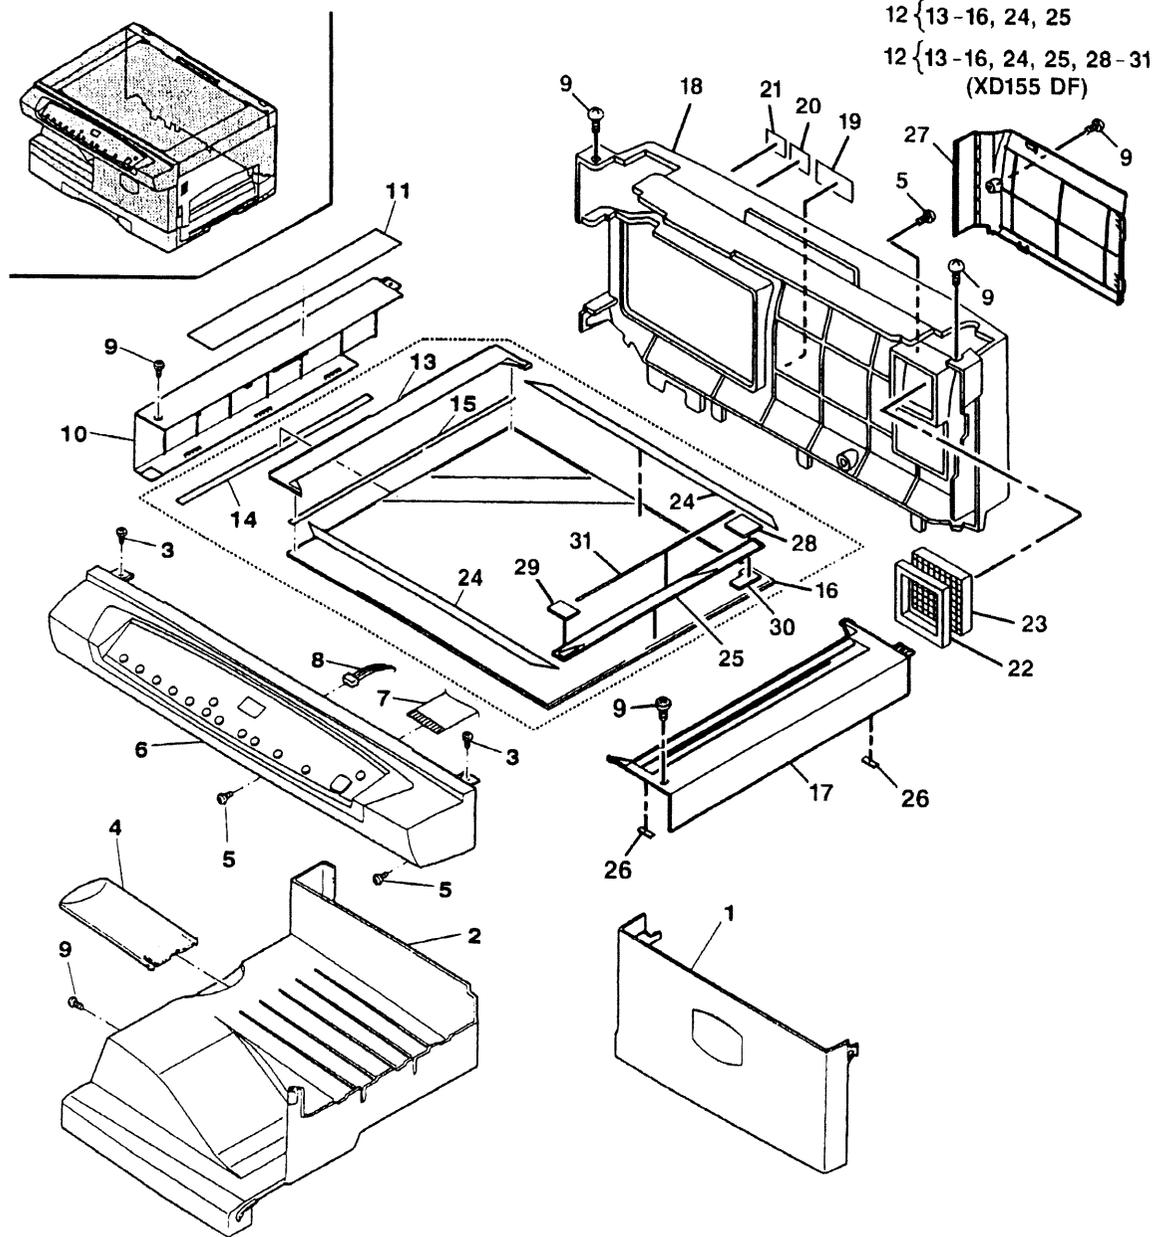


12 {13-16, 24, 25
12 {13-16, 24, 25, 28-31
(XD155 DF)

0000001C-SKW

PL 1.2 КРЫШКА СТЕКЛА ЭКСПОНИРОВАНИЯ
(XD100/102/104)


Item	Part	Description
1	-	REAR PIVOT ATTACHMENT
2	-	DOCUMENT COVER
3	-	DOCUMENT COVER CUSHION
4	-	DOCUMENT ORGANIZER
5	2N1534	DOCUMENT COVER ASSEMBLY (W/ORGANIZER) (XD100/104)
6	2N1526	DOCUMENT COVER ASSEMBLY (W/O ORGANIZER) (XD102)

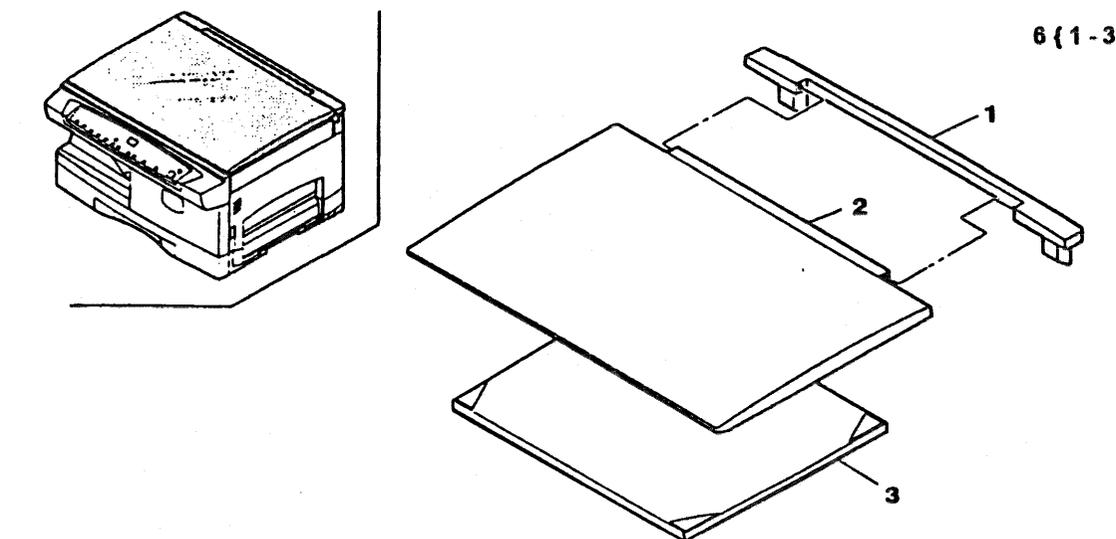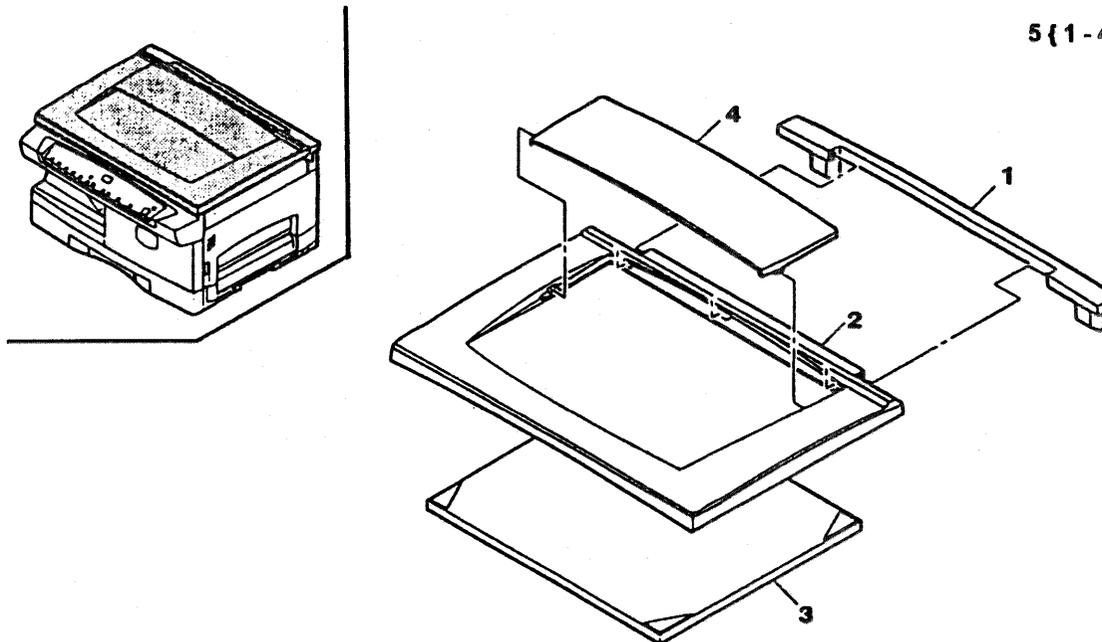

000002B-SKW

**PL 1.3 ПАНЕЛЬ УПРАВЛЕНИЯ
(XD100/102/104/20F)**


Item	Part	Description
1	53N162	CONTROL BUTTON COVER (ACO) (XE)
-	53N163	(XD102) (US)
-	53N164	(XD102) (XE) (ACO)
-	53N165	(XD104) (XE) (ACO)
-	53N166	(XD100) (US)
-	53N170	(XD120F) (US)
-	53N175	(XD155DF) (US)
-	53N172	(XD105F)
-	53N176	(XD103F)
2	-	CONTROL CONSOLE COVER
3	3N673	START PRINT BUTTON
4	3N669	CLEAR/STOP BUTTON
5	3N671	FUNCTION BUTTON (R)
6	3N672	FUNCTION BUTTON (L)
7	3N670	BOOK MODE SELECT BUTTON
8	140N5107	CONTROL CONSOLE PWB (XD100/102)
-	140N5206	CONTROL CONSOLE PWB (XD120F)
-	140N5223	CONTROL CONSOLE PWB (XD105F, XD103F)
9	-	GROUNDING SPRING
10	-	SCREW (3X8)
11	2N1593	CONTROL CONSOLE

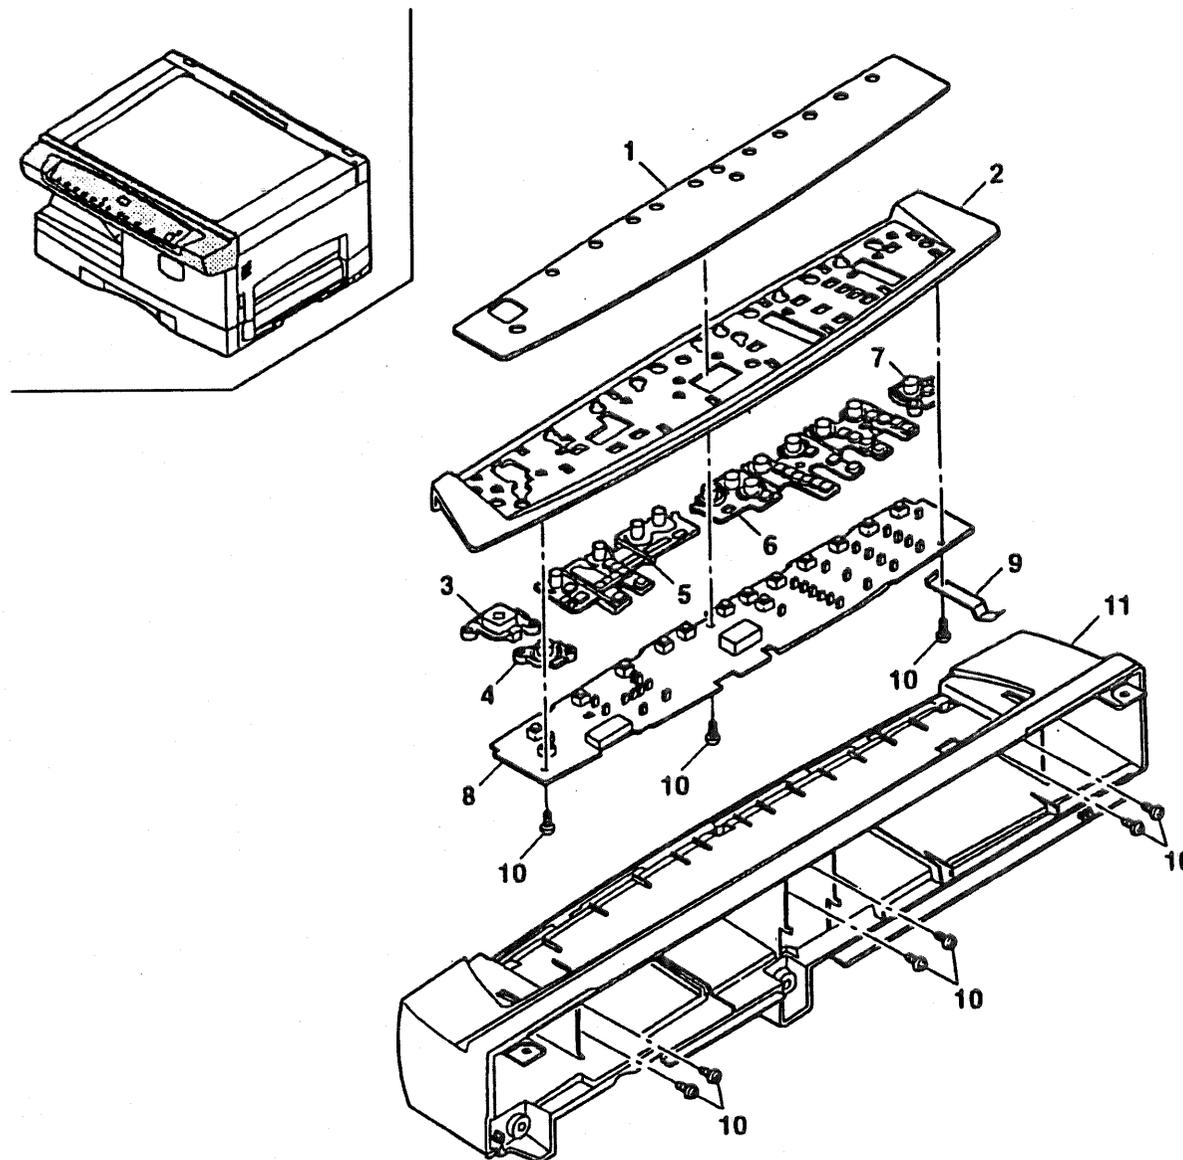

000003A-SKW

PL 1.4 БОКОВАЯ ДВЕРЦА


Item	Part	Description
1	-	SIDE DOOR
2	3N668	SIDE DOOR LATCH
3	9N978	LATCH SPRING
4	-	HINGE GUIDE
5	-	GROUNDING PLATE
6	-	GROUNDING SPRING
7	-	SCREW (3X6)
8	-	SCREW (3X6)
9	-	INNER PAPER GUIDE
10	-	SCREW (3X10)
11	9N964	PRESSURE SPRING
12	152N1635	GROUND WIRE
13	9N963	GROUNDING SPRING
14	9N962	PRESSURE SPRING
15	-	SHAFT
16	-	E-RING
17	22E22060	UPPER ROLLER
18	19N415	TRANSFER/DETACK COROTRON ASSEMBLY (REP 9.2)
19	-	SCREW (3X8) (XD155DF)
20	7N750	DUPLEX DRIVE GEAR (XD155DF)
21	7N751	DUPLEX DRIVE GEAR A (XD155DF)
22	22N1002	DUPLEX DRIVE ROLLER (XD155DF) (REP 5.28)
23	9N1027	DUPLEX PRESSURE SPRING (XD155DF)

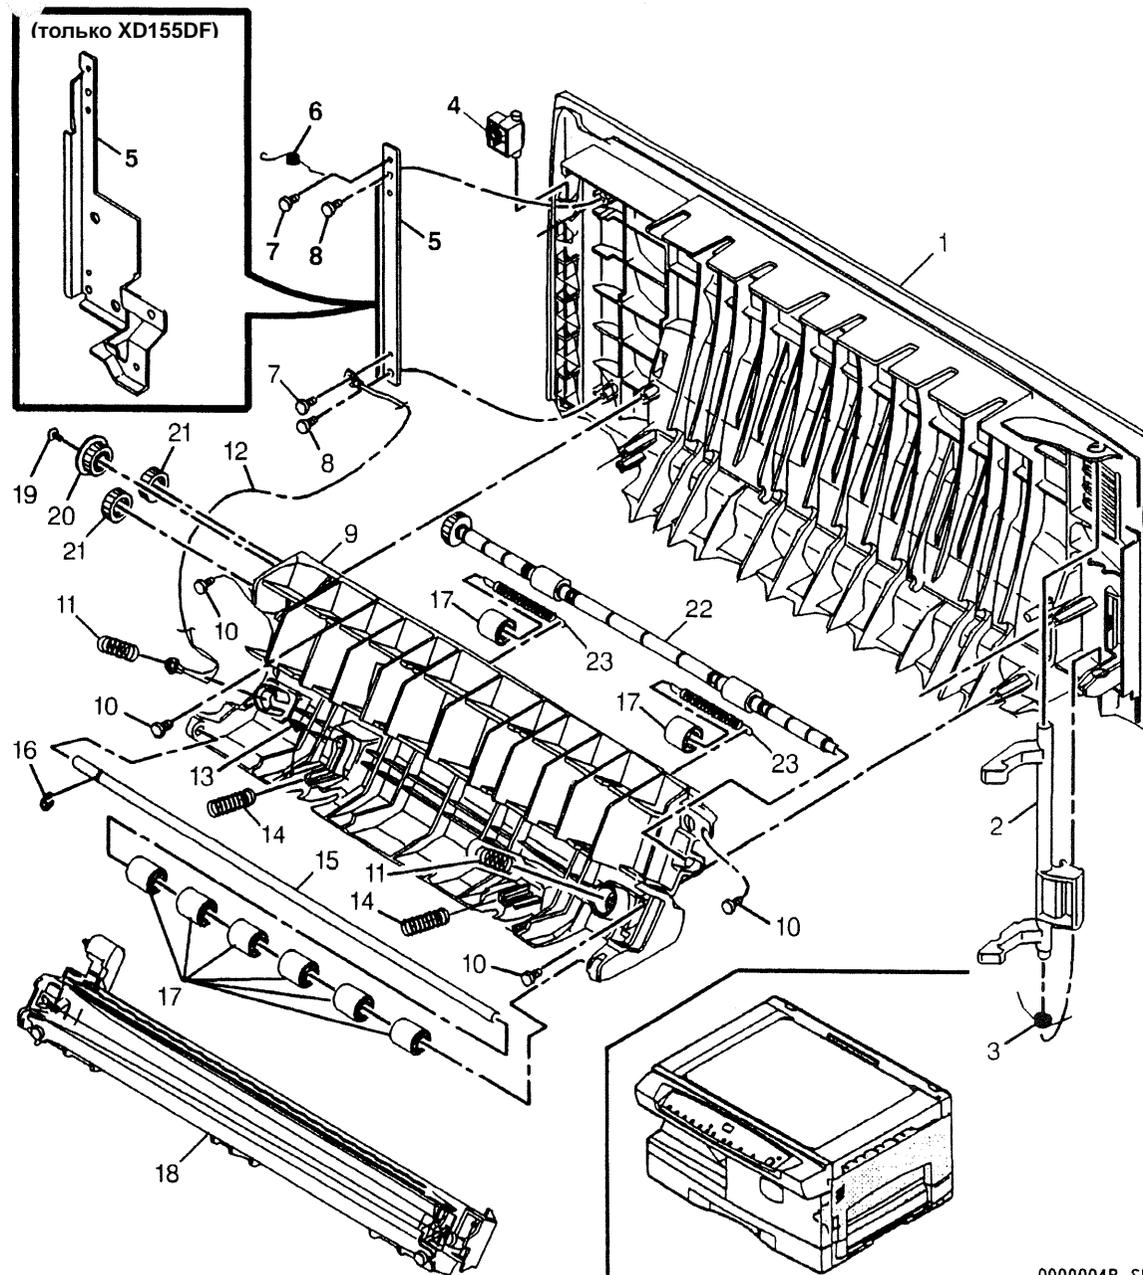

000004B-SKW

PL 2.1 ЭЛЕМЕНТЫ ПРИВОДОВ И СРЕДНЕЙ РАМЫ


Item	Part	Description
1	22N926	EXIT ROLLER (REP 8.9)
2	-	BEARING
3	22N925	LOWER TRANSPORT ROLLER (REP 8.11)
4	20N449	PULLEY (22T)
5	23N596	EXIT DRIVE BELT
-	23N634	DUPLEX DRIVE BELT (XD155DF ONLY)
6	-	CABLE TIE
7	-	COUPLING
8	-	SPRING
9	127N972	TONER MOTOR (MOT 4) (REP 9.1)
10	-	SCREW (3X10)
11	-	SCREW (3X30)
12	127N971	VENTILATION FAN (MOT 3) (REP 10.6)
13	-	TRANSFER COROTRON CONTACT HOUSING
14	-	BIAS CONTROL PLATE
15	-	SCREW (3X6)
16	-	TRANSFER COROTRON PLATE
17	-	SCREW (3X6)
18	152N1634	BIAS CONTROL HARNESS
19	152N1636	TRANSFER COROTRON HARNESS
20	23N597	MANUAL EXIT DRIVE BELT (REP 8.10)
21	-	CENTER FRAME
22	3N675	MANUAL EXIT KNOB
23	152N1626	FUSER JAM SENSOR HARNESS
24	152N1623	FUSER HEAT ROD HARNESS (100V) (230V)
-	152N1660	HARNESS GUIDE
25	-	GUIDE PIN
26	-	GUIDE PIN
27	152N1627	DVS HARNESS
28	-	SCREW (3X6)
29	-	SCREW (3X8)
30	-	SCREW (4X12)
31	120N297	DUPLEX MOTOR MOUNTING BRACKET (XD155DF ONLY)
32	-	DUPLEX SPACER (XD155DF ONLY)
33	-	SCREW (3X10) (XD155DF)
34	-	SCREW (3X6) (XD155DF)
35	127N996	EXIT DRIVE MOTOR (MOT5) (XD155DF) (REP 5.30)
36	-	SHIELD (XD155DF)

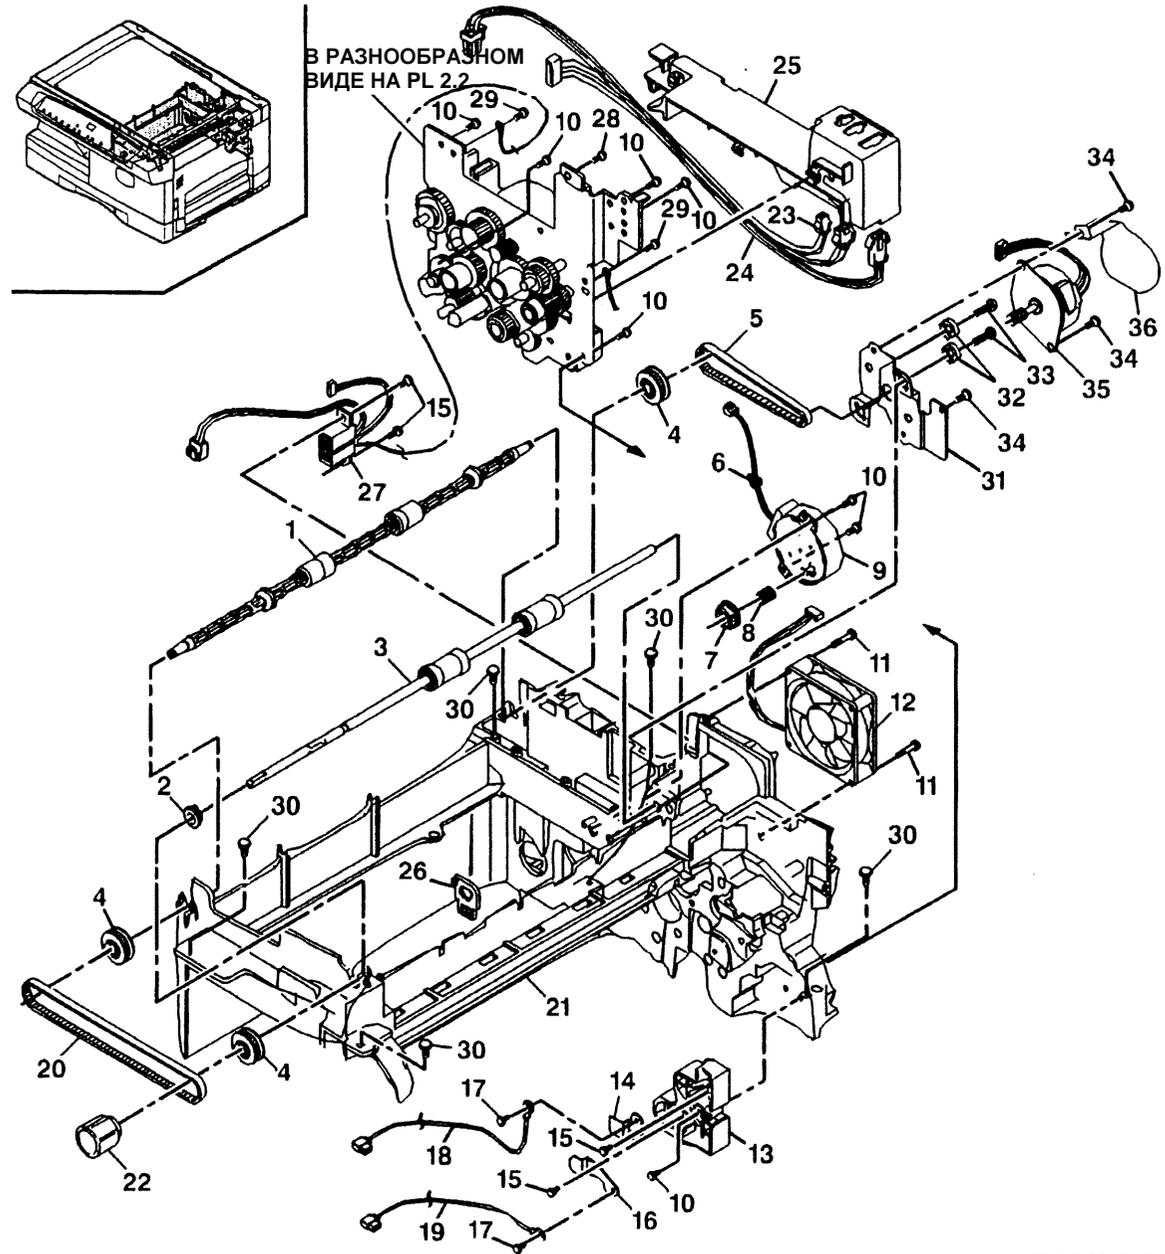

000010C-SKW

PL 2.2 УЗЕЛ ГЛАВНОГО ПРИВОДА

Item	Part	Description
1	5N602	MAIN DRIVE ASSEMBLY (REP 8.12)
2	127N969	MAIN DRIVE MOTOR (MOT 1) (REP 4.1)
3	-	SPRING
4	-	GEAR
5	-	PULLEY
6	7N705	GEAR (28T)
7	7N704	GEAR (46/16T)
8	7N708	GEAR (30/15T)
9	7N701	DRIVE GEAR ASSEMBLY
10	7N709	GEAR (37/15T)
11	7N702	GEAR (68/26T)
12	7N710	COUPLING GEAR (34T)
13	7N713	RATCHET GEAR (21T)
14	7N712	RATCHET GEAR (28T)
15	-	SPRING
16	7N703	GEAR (55/19T)
17	7N711	GEAR (33/20/15T)
18	7N706	GEAR (20T)
19	7N707	GEAR (31/17T)
20	-	MAIN DRIVE BRACKET
21	-	SCREW (3X4)
22	121N400	PAPER FEED SOLENOID (SOL 1) (REP 8.1)
-	121N421	PAPER FEED SOLENOID (XD155DF)
23	-	SPRING
24	-	PAWL
25	121N401	REGISTRATION ROLL SOLENOID (SOL 3) (REP 8.2)
26	-	PAWL
27	-	SCREW (4X6)
28	152N1633	MAIN MOTOR HARNESS

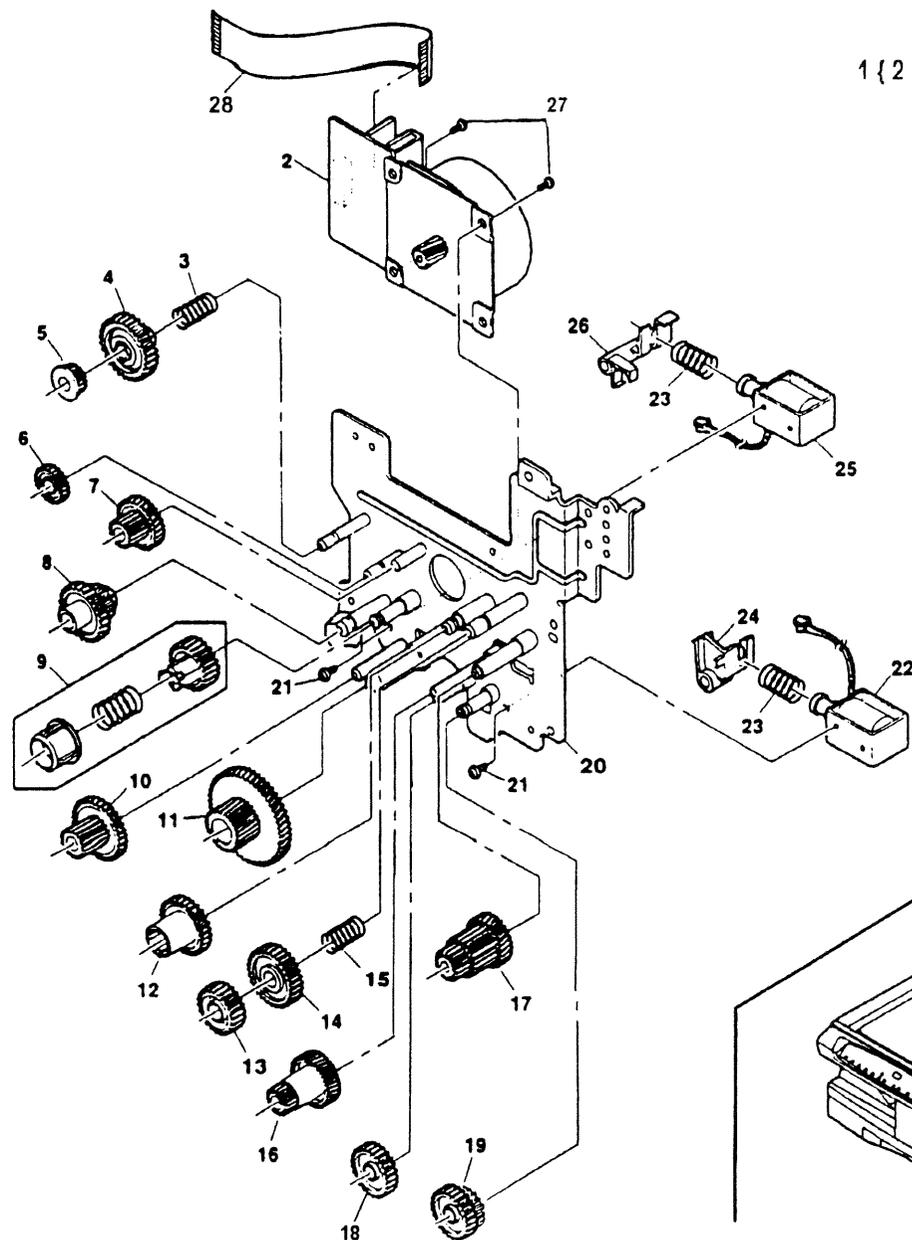


0000016C-SKW

PL 3.1 ОПТИЧЕСКИЙ УЗЕЛ (1 ИЗ 2)

Item	Part	Description
1	12N105	SCAN CABLE
2	-	HALF RATE CARRIAGE ASSEMBLY
3	62N139	EXPOSURE LAMP CARRIAGE (REP 6.2)
4	-	CABLE CLAMP
5	-	SCREW (3X5)
6	152N1631	EXPOSURE LAMP HARNESS
7	-	SCREW
8	-	PULLEY STUD PLATE
9	-	PULLEY
10	-	PULLEY
11	-	E-RING
12	-	OPTICS FRAME
13	-	SCREW (3X8)
14	-	SCAN RAIL (REAR)
15	-	SCAN RAIL (FRONT)
16	-	SCREW
17	-	E-RING
18	7N694	SCAN DRIVE GEAR/PULLEY
19	-	MOTOR TENSION SPRING
20	127N970	SCAN DRIVE MOTOR (MOT 2) (REP 6.3)
21	-	SCAN DRIVE MOTOR MOUNTING PLATE
22	-	E-RING
23	-	BEARING
24	-	SPRING PIN (3MM)
25	-	SCAN DRIVE PULLEY
26	64N25	SCAN DRIVE BELT
27	-	SCREW (3X4)
28	-	SCAN CABLE HUB
29	-	SCREW (4X6)
30	-	SCAN CABLE DRIVE SHAFT
31	-	BEARING
32	-	WASHER
33	-	OPTICS FRAME ASSEMBLY (REP 6.6)


33 (1 - 32

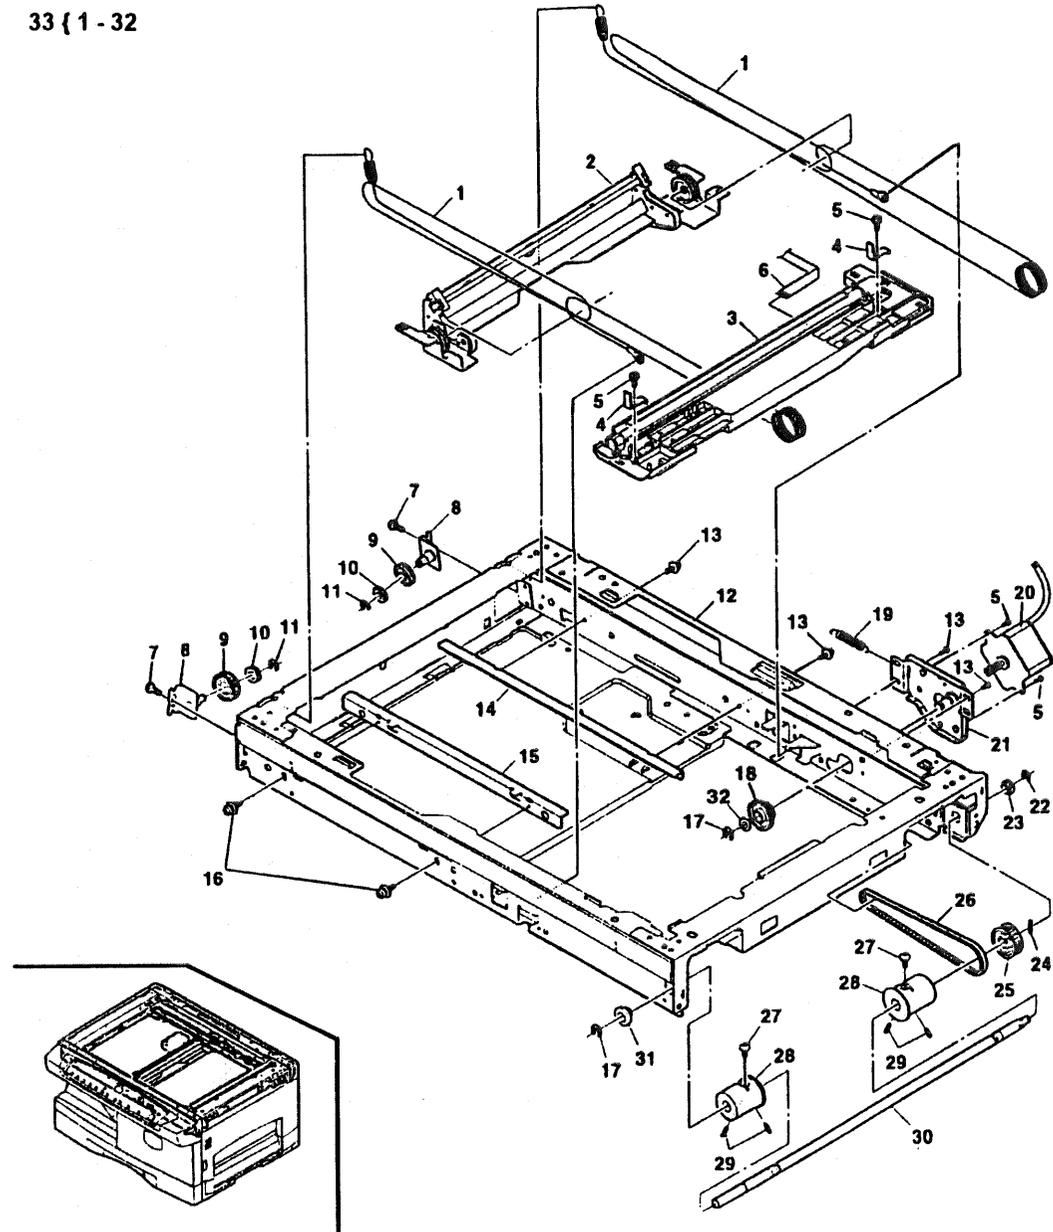

000005B-SKY

PL 3.2 ОПТИЧЕСКИЙ УЗЕЛ (2 ИЗ 2)


Item	Part	Description
1	-	SCREW (3X8)
2	-	LENS COVER
3	152N1631	EXPOSURE LAMP HARNESS
4	-	HARNESS GUIDE
5	152N1632	CCD HARNESS
6	-	SCREW
7	62N141	LENS/CCD MODULE (REP 6.5)
8	-	SCREW (3X8)
9	140N5112	SCAN HOME SENSOR (Q5)
10	-	DOCUMENT GLASS CUSHION
11	-	RIBBON GUIDE
12	-	PROTECTOR SHEET
13	115N273	DISCHARGE BRUSH
14	-	OPTICS FRAME GUIDE
15	-	UPPER DUPLEX PAPER GUIDE
16	96E90830	CAUTION LABEL
17	-	CCD HARNESS COVER
18	-	CCD PWB COVER
19	-	FERRITE HOLDER
20	-	LOWER SHEET
21	-	SCREW (4X12)
22	-	FERRITE
23	-	CUSHION
24	3N684	SDF LEFT HINGE GUIDE (XD120F)
-	3N690	(XD103F, XD120F) (XE)
25	3N685	SDF RIGHT HINGE GUIDE (XD120F)
-	3N691	(XD103F, XD120F) (XE)
26	-	SCREW (3X8) (XD120F)
27	-	WIRE BAND (XD120F)
28	-	BAND (PLT1M) (XD120F)
29	-	WIRE HOLDER (LWS-1M) (XD120F)
30	38N277	CUSHION (XD155DF)
31	-	CRIP HOLDER (XD155DF)

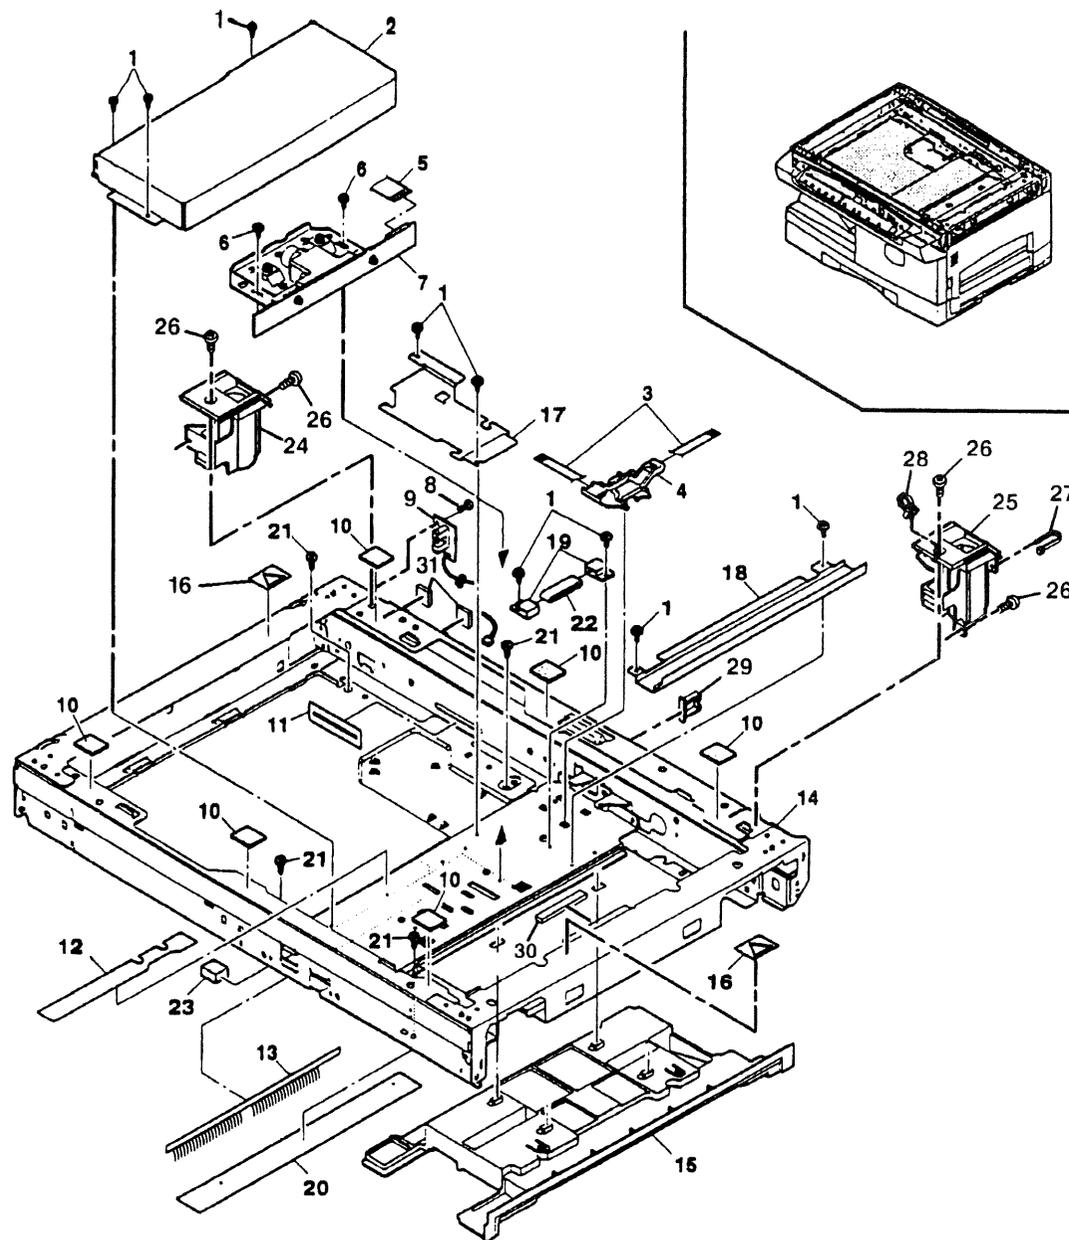

000006C-SKW

PL 3.3 УЗЕЛ ЛАЗЕРА


Item	Part	Description
1	-	SCREW (3X6)
2	-	LASER HARNESS COVER
3	152N1628	LASER HARNESS
4	-	TIE WRAP
5	62N142	LASER MODULE (REP 6.4)
6	-	SPRING
7	-	SCREW
8	-	SPIRAL WRAP (XD155DF)

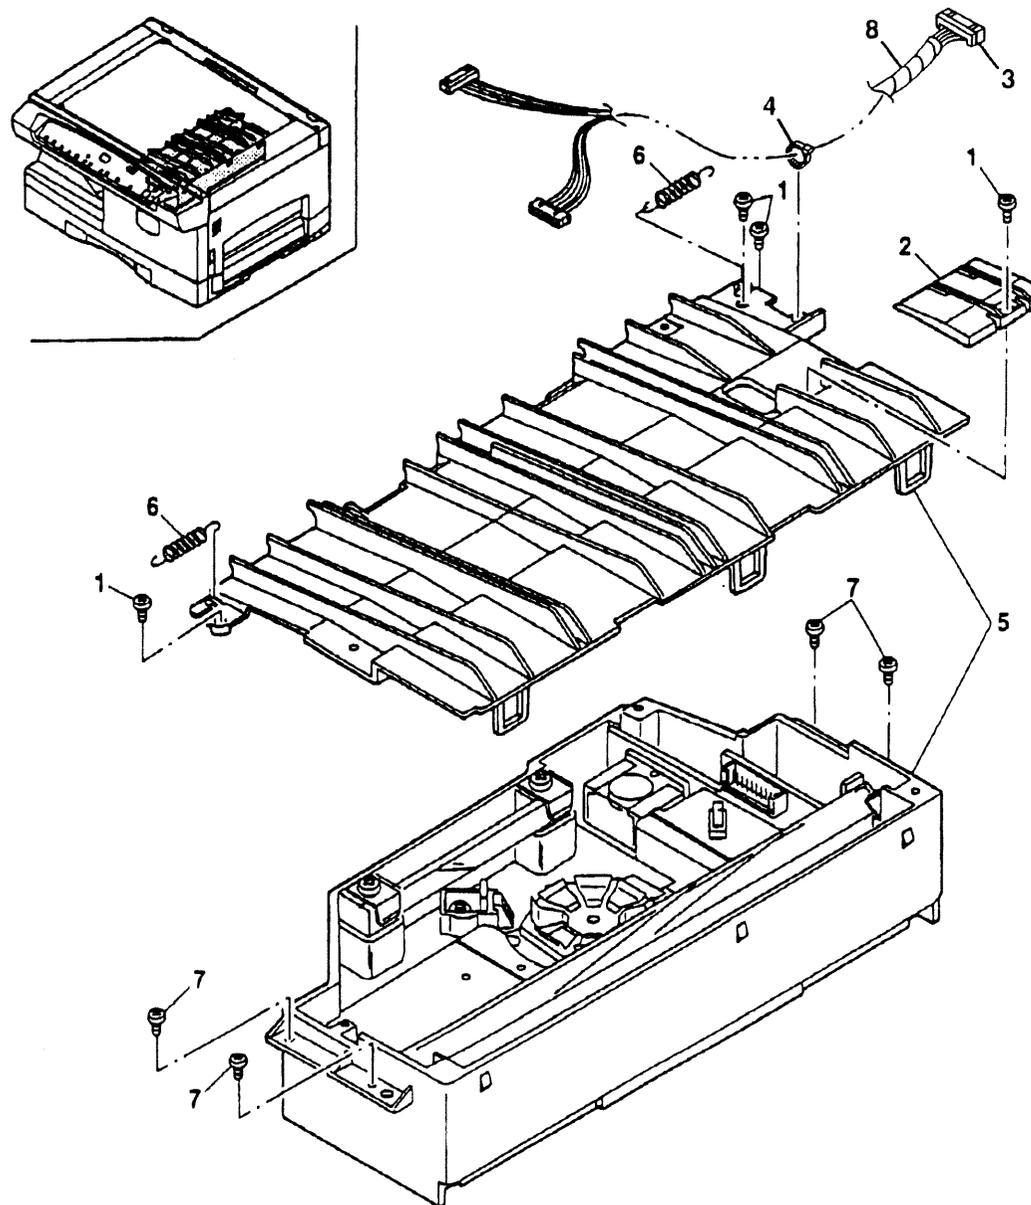

000007B-SKW

PL 3.4 УЗЕЛ КАРЕТКИ ПОЛОВИННОГО ХОДА

Item	Part	Description
1	-	LIGHT SHIELD
2	-	HALF RATE CARRIAGE
3	-	SCREW (4X6)
4	-	PULLEY
5	-	GUIDE
6	-	SCREW (4X6)
7	10N64	SLIDE BUTTON
8	-	SCREW
9	-	PULLEY BRACKET (REAR)
10	4N188	CUSHION (REAR)
11	19E26730	MIRROR CLIP
12	62N140	MIRROR
13	-	PULLEY BRACKET (FRONT)
14	4E8450	CUSHION (FRONT)
15	-	HALF RATE CARRIAGE ASSEMBLY

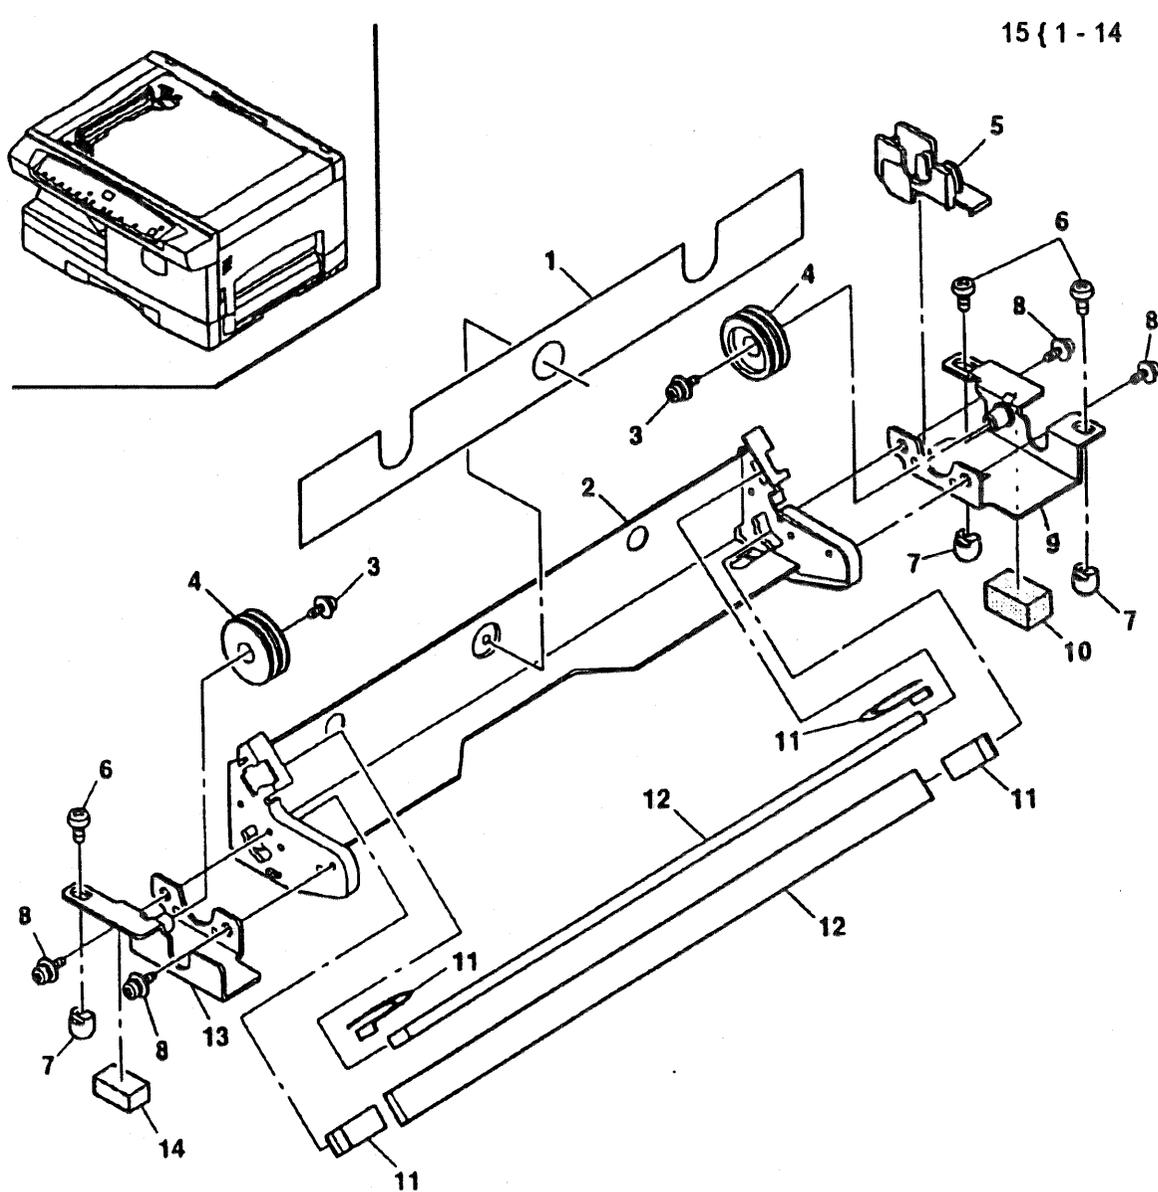


000008A-SKW

PL 4.1 ЛОТОК НА 250 ЛИСТОВ

Item	Part	Description
1	-	PAPER PRESSURE PLATE
2	19E37760	RETARD PAD
3	120E10520	PRESSURE PLATE LOCK
4	3E26060	PAPER SIZE GUIDE
5	-	FRONT PAPER GUIDE
6	19E37850	FRONT PAPER SNUBBER
7	-	E-RING
8	-	LABEL
9	-	SCREW (3X8)
10	-	WASHER
11	-	GEAR
12	-	LOAD LABEL
13	-	REAR PAPER GUIDE
14	19E37840	REAR PAPER SNUBBER
15	809E24950	LIFT SPRING
16	-	TRAY SPRING
17	-	SPRING
18	-	PLATE RELEASE
19	-	TRAY FRAME
20	-	LABEL
21	50N233	250 SHEET PAPER TRAY


21 { 1 - 20

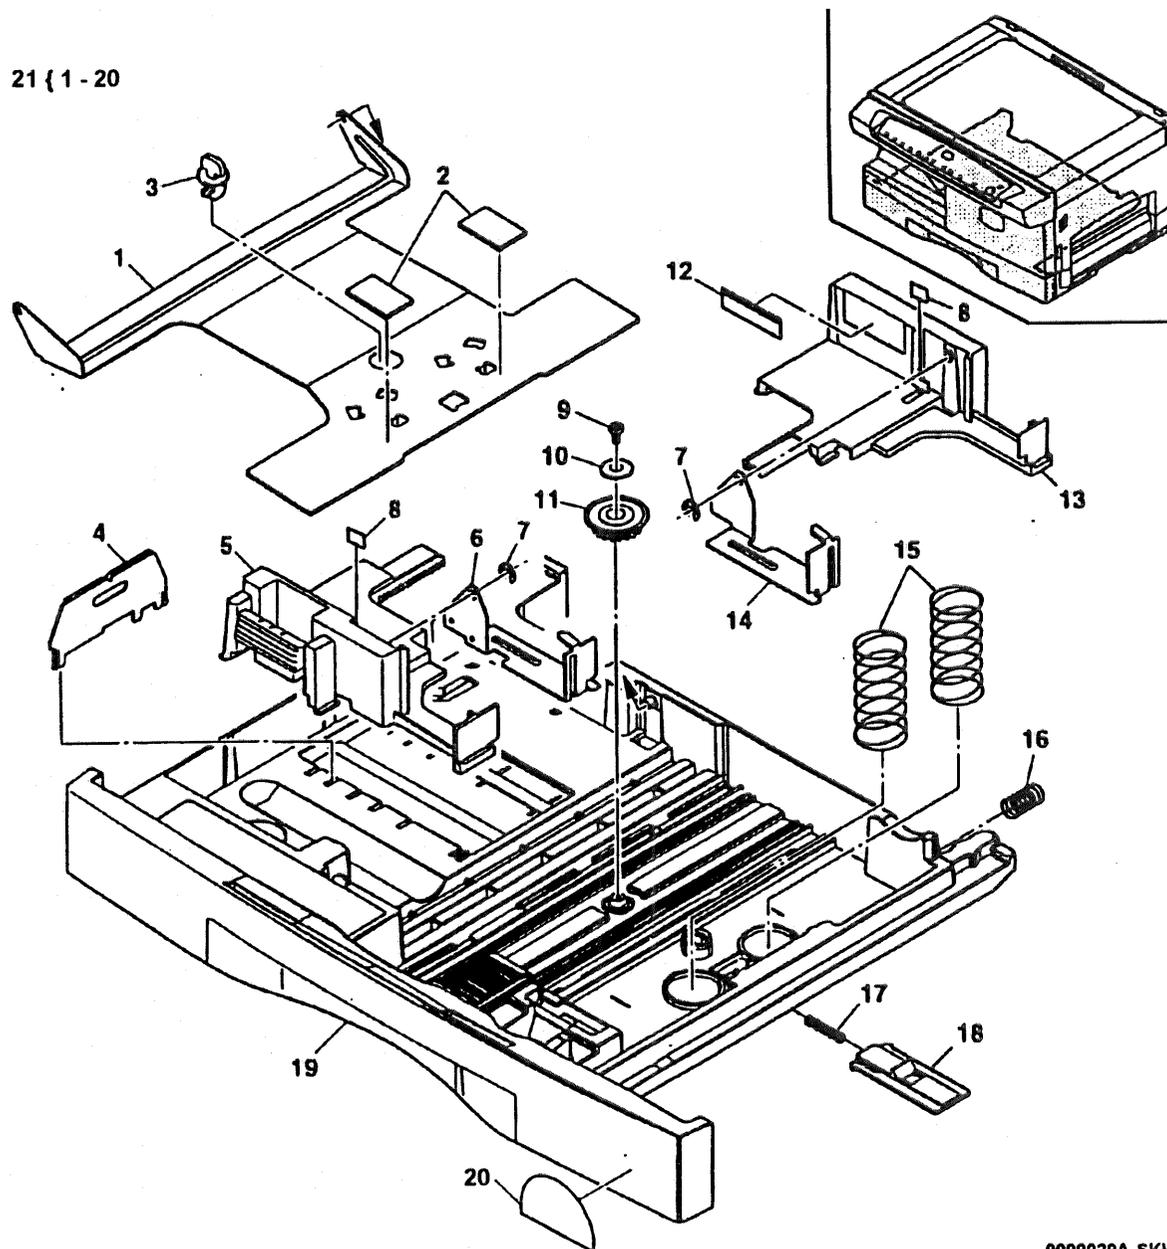

0000020A-SKW

PL 5.1 ПОДАЧА БУМАГИ И ПРИВОДЫ


Item	Part	Description
1	140N5109	TRAY 1 PAPER FEED SENSOR (Q1) (REP 8.3)
2	120N276	SENSOR ACTUATOR
3	-	ACTUATOR SPRING
4	-	SCREW (3X10)
5	-	UPPER FRONT PAPER GUIDE
6	-	E-RING
7	22N929	LOWER REGISTRATION ROLLER (REP 8.13)
8	-	BEARING
9	-	CLUTCH GEAR (26T)
10	5E9640	CLUTCH SLEEVE
11	-	CLUTCH SPRING
12	-	SPRING PIN
13	-	CLUTCH BOSS
14	-	E-RING
15	5E4260	CLUTCH BOSS
16	9E17190	CLUTCH SPRING
17	16N174	CLUTCH SLEEVE
18	7E47590	CLUTCH GEAR (29T)
19	13E12330	BEARING
20	22N928	PAPER FEED ROLLER (REP 8.6)
21	7N698	GEAR (33T)
22	7N700	GEAR (21/29T)
23	7N699	GEAR (30T)
24	-	GEAR SUPPORT BRACKET
25	-	GROUNDING PLATE
26	110N817	TRAY DETECT SWITCH (S2) (REP 8.14)
-	-	DRUM RESET SWITCH (S6)
27	152N1638	TRAY DETECT SWITCH HARNESS (REP 8.5)
28	-	BASE FRAME
29	19E15900	RETARD PAD
30	-	RETARD ARM
31	-	LIFT SPRING
32	-	RETARD SUPPORT PLATE
33	-	SPRING (XD100/102)
34	-	PAPER GUIDE
35	-	SCREW (4X12)
36	38E13480	RETARD PAD (XD104)
37	-	SCREW (3X8)
38	-	SENSOR COVER
39	152N1637	D-RST HARNESS
40	-	SCREW (3X12)
41	9N970	FRONT LEVER SPRING
42	3N674	FRONT LEVER PLATE
43	-	WASHER
44	-	GUIDE (XD155DF)
45	-	SCREW (4X12) (XD120F)
46	15N289	FIXING PLATE (XD120F)
47	7E47680	JOINT GEAR (XD120F)
48	-	E-RING (XD120F)

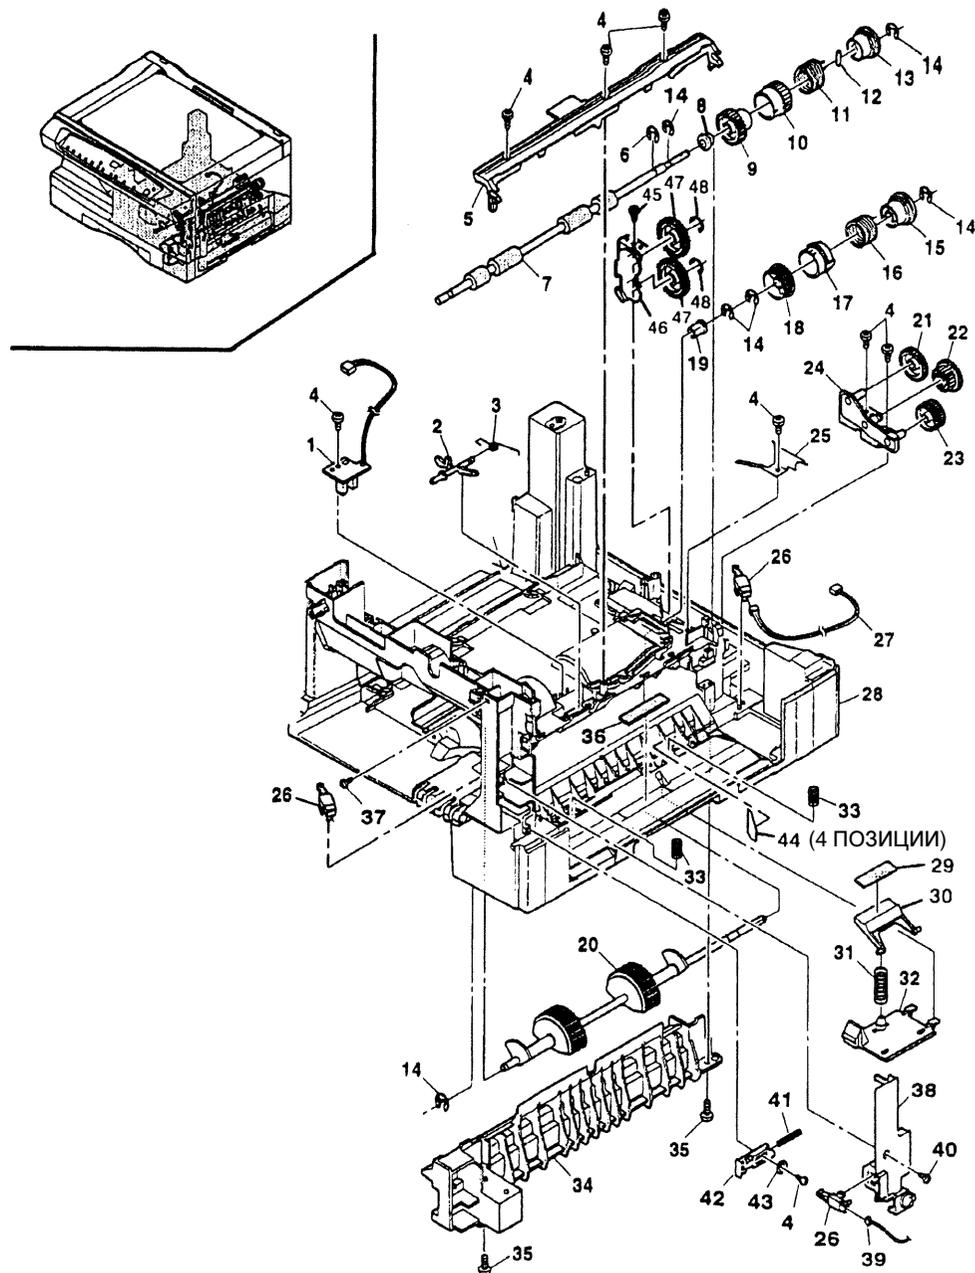

0000011D-SKW


PL 5.2 ОДНОЛИСТОВОЙ ОБХОДНОЙ ЛОТОК

Item	Part	Description
1	22N933	SINGLE BYPASS ASSEMBLY
2	-	GROUND WIRE
3	-	TIE WRAP
4	-	SCREW (3X6)
5	-	PAPER FEED BRACKET
6	-	GEAR (27T)
7	-	E-RING
8	-	SCREW 3X8
9	-	GEAR (16T)
10	-	SPRING PIN
11	-	BUSHING
12	22N932	TRANSPORT ROLLER (REP 8.7)
13	-	BYPASS FRAME
14	-	GROUNDING SPRING
15	-	SCREW (3X6)
16	-	ACTUATOR SPRING
17	120N277	ACTUATOR
18	-	SPRING
19	140N5106	BYPASS FEED SENSOR (Q2) (REP 6.4)
20	-	DUPLEX UPPER GUIDE
21	-	SINGLE BYPASS GUIDE (R)
22	-	SINGLE BYPASS GUIDE (F)
23	-	SCREW (3X6)
24	22E22060	BYPASS ROLL
25	-	SINGLE BYPASS FRAME
26	-	SPRING
27	-	PAPER FEED GEAR
28	-	SCREW (3X6)
29	-	GROUNDING SPRING
30	-	SCREW (3X6)
31	-	GROUNDING SPRING
32	-	SCREW (4X12)
33	22N930	SINGLE BYPASS UPPER ASSFMRI Y

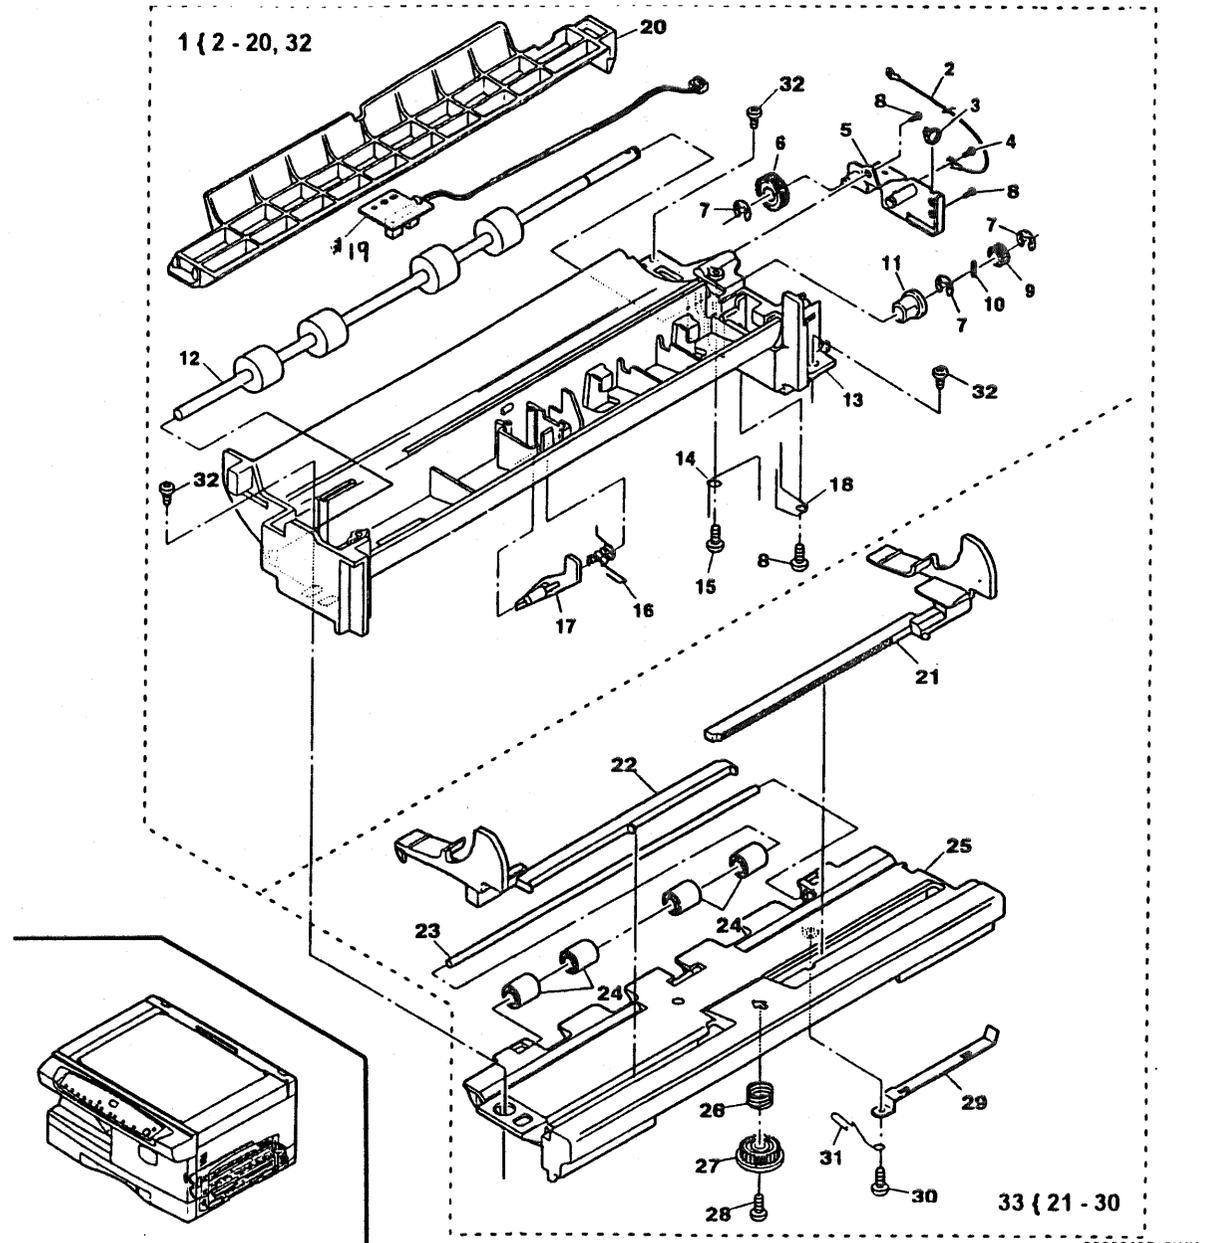

PL 5.3 КРЫШКА ОДНОЛИСТОВОГО ОБХОДНОГО
ЛОТКА



Item	Part	Description
1	42E1430	COROTRON CLEANER
2	-	SCREW
3	-	UPPER COVER
4	110N783	SIDE DOOR INTERLOCK SWITCH (S3/S4) (24V/5V) (REF B B)
5	-	SCREW (2X16)
6	-	SWITCH ACTUATOR
7	-	CAUTION LABEL (XL)

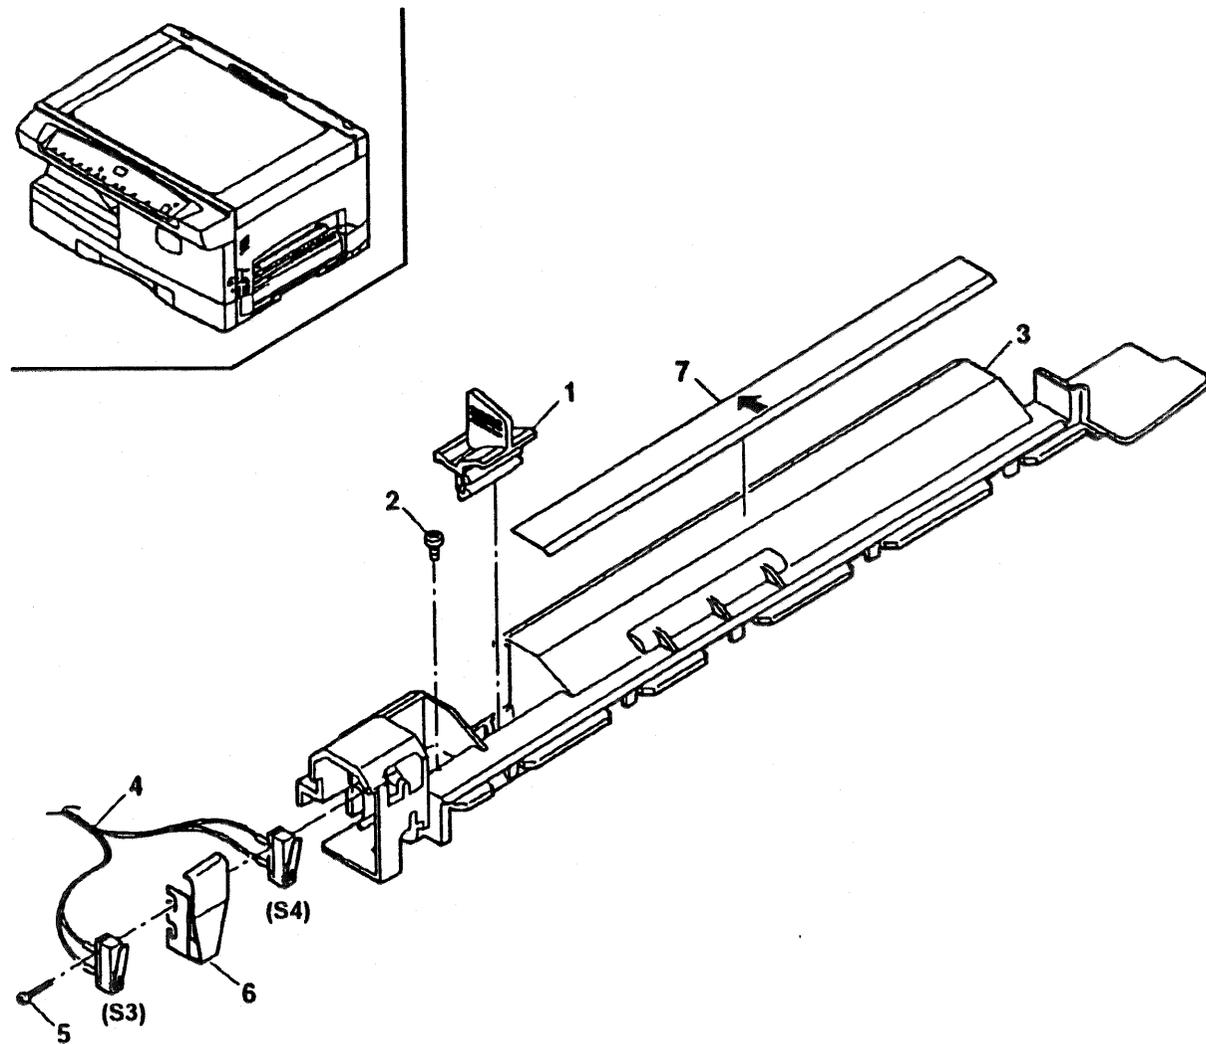

0000017A-SKW

PL 5.4 КРЫШКА МНОГОЛИСТОВОГО ОБХОДНОГО ЛОТКА


Item	Part	Description
1	42E1430	COROTRON CLEANER
2	-	SCREW
3	-	UPPER COVER
4	110N783	SIDE DOOR INTERLOCK SWITCH (S3/S4) (24V/5V) (REP 8.8)
5	-	CAUTION LABEL (XE)
6	-	SWITCH ACTUATOR

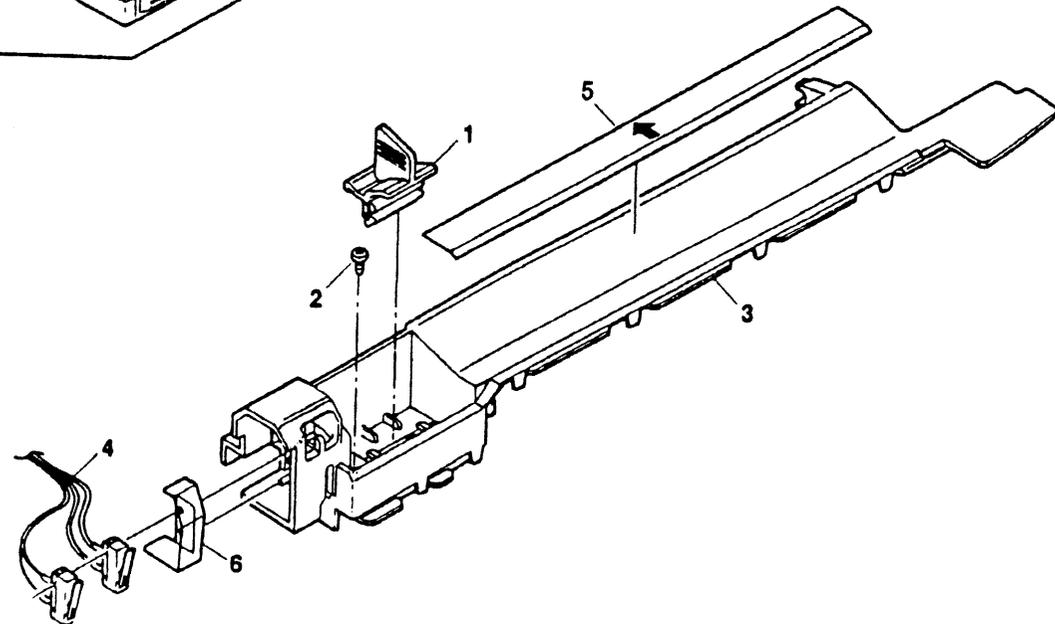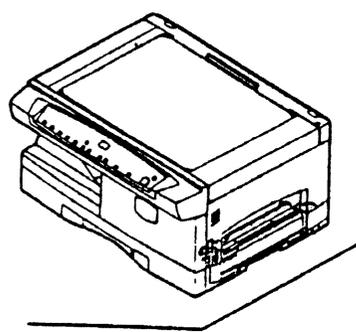

0000026B-SKW

PL 5.5 МНОГОЛИСТОВОЙ ОБХОДНОЙ ПОДАТЧИК


Item	Part	Description
1	5E10560	FEED ROLL (REF 3.15)
2	-	E-RING
3	-	GEAR (20T)
4	-	ROLL SUPPORT
5	22E20680	RETARD ROLL (REF 3.16)
6	-	SPRING PIN
7	-	GEAR (16T)
8	-	SHAFT
9	-	BUSHING
10	-	SUPPORT
11	-	SCREW (3X8)
12	-	UPPER GUIDE
13	-	SCREW (3X6)
14	-	GROUNDING SPRING
15	5E9560	CLUTCH BOSS
16	9E57550	FEED CLUTCH SPRING
17	5E9640	CLUTCH SLEEVE
18	5E9540	CLUTCH BOSS
19	-	GEAR (27T)
20	-	GEAR (20T)
21	-	TIE WRAP
22	-	GROUNDING WIRE
23	-	SCREW (3X6)
24	-	SCREW (3X6)
25	-	SUPPORT PLATE
26	-	CLUTCH SLEEVE
27	-	CLUTCH SPRING
28	-	CLUTCH BOSS
29	121N402	FEED SOLENOID (REF 6.17)
30	-	SOLENOID SPRING
31	-	RATCHET ARM
32	-	RATCHET ARM
33	-	SPRING
34	-	SCREW (3X8)
35	-	FRAME
36	-	SCREW (4X12)
37	-	GATE
38	-	SUPPORT FRAME
39	-	ARM
40	-	HINGE
41	-	SPRING
42	-	FEEDER ASSEMBLY

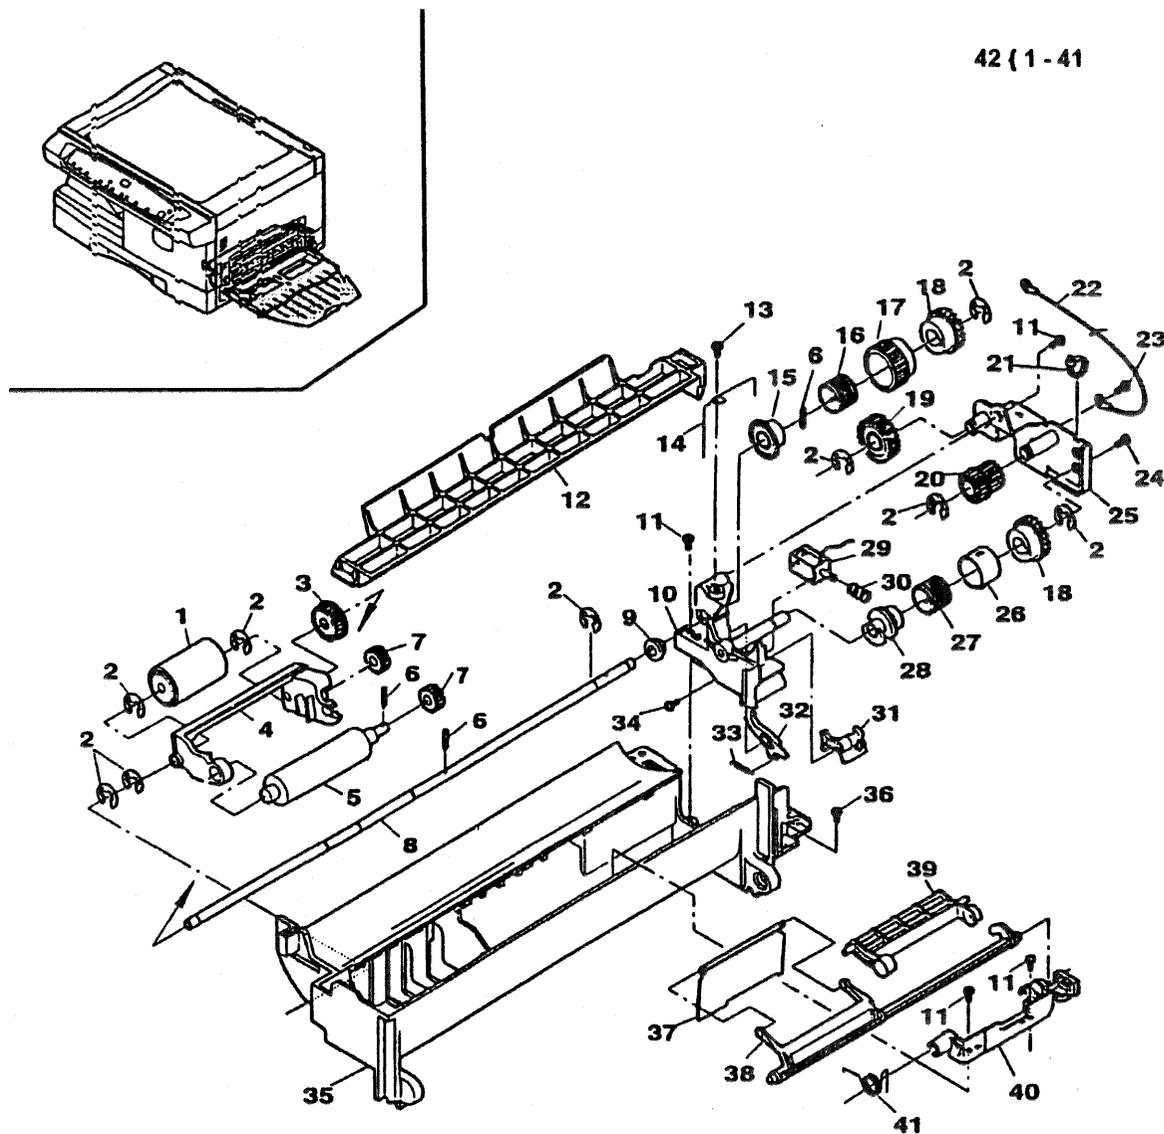

000023A-SKW

PL 5.6 МНОГОЛИСТОВОЙ ОБХОДНОЙ ЛОТОК


Item	Part	Description
1	50N231	TRAY ASSEMBLY
2	-	REAR GUIDE
3	-	FRONT GUIDE
4	-	TRAY COVER
5	-	SPRING
6	-	GEAR
7	-	SCREW (3X6)
8	-	TRAY BASE
9	-	TRAY EXTENSION

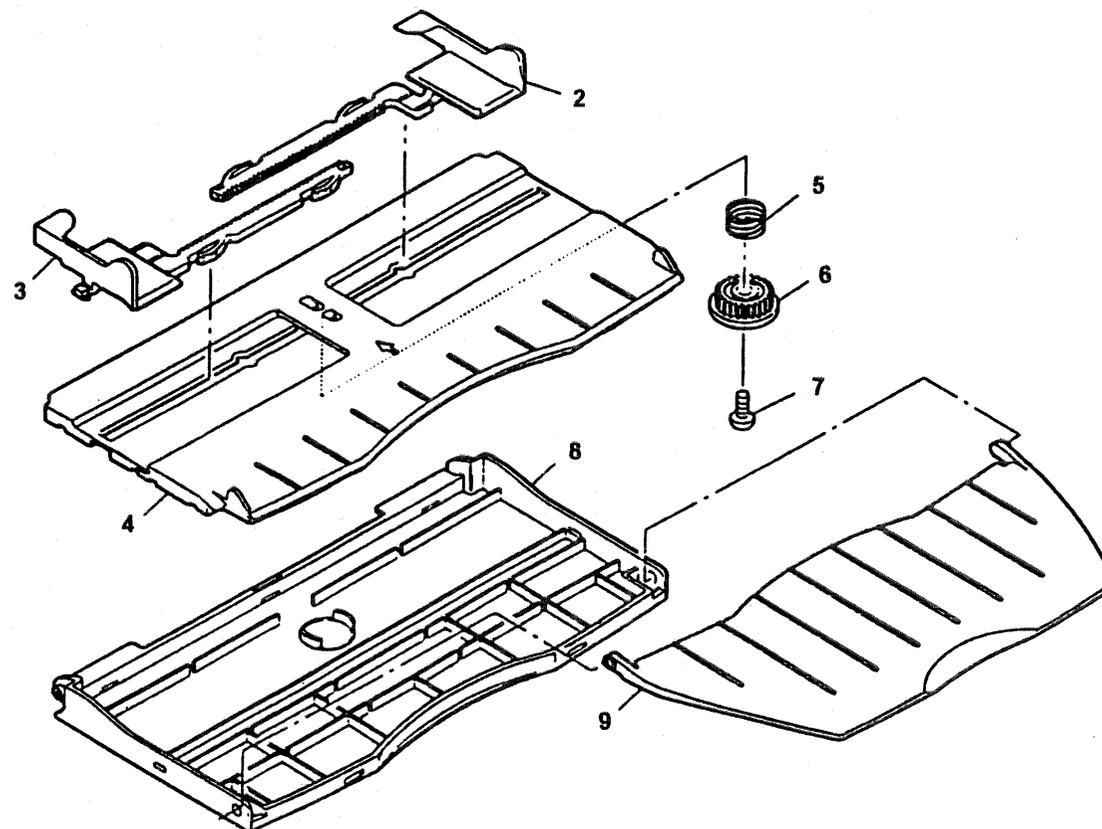

000024A-SKW

PL 5.7 УЗЕЛ РАМЫ ЛОТКА 2

Item	Part	Description
1	-	FRONT COVER
2	-	SCREW (4X12)
3	-	REAR COVER
4	-	LEFT TRAY GUIDE
5	-	SCREW (4X12)
6	-	REAR TIE PLATE
7	17E8540	RUBBER FOOT
8	-	RIGHT TRAY GUIDE
9	809E11980	TRANSPORT COVER SPRING
10	-	TRANSPORT COVER
11	22N970	IDLER ROLLER
12	9N1072	IDLER SPRING
13	31N159	ARM
14	-	LOWER SIDE DOOR
15	-	SCREW (4X8)
16	-	SCREW (3X16)
17	-	TRAY 2 FEED ASSEMBLY
18	152N1655	TRAY 2 HARNESS
19	50N256	250 CASSETTE ASSEMBLY

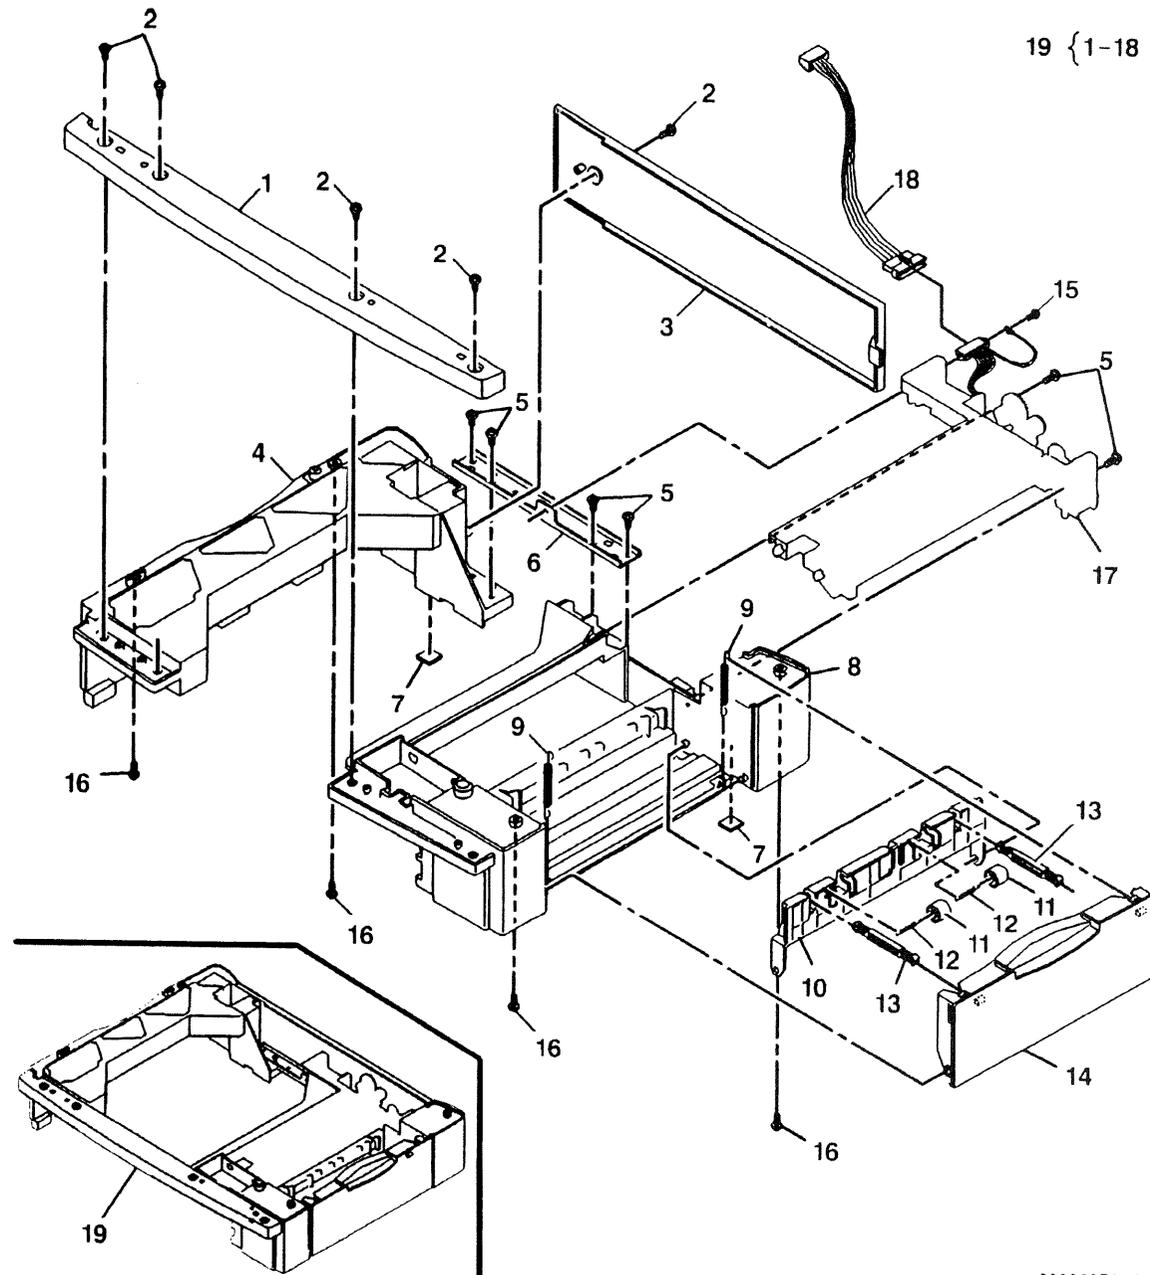


19 { 1-18

0000027A-SKW

PL 5.8 УЗЕЛ ПОДАЧИ БУМАГИ ЛОТКА 2

26 { 1-25


Item	Part	Description
1	22N1029	TRAY 2 TRANSPORT ROLLER (REP 8.23)
2	13E12360	BEARING (B-F5-13)
3	-	E-RING
4	-	DRIVE FRAME
5	7E29480	GEAR (20T)
6	29N182	SPRING PIN
7	5E4260	CLUTCH BOSS
8	9E17190	CLUTCH SPRING
9	-	CLUTCH SLEEVE
10	7E47590	CLUTCH GEAR (29T) (REP 8.24)
11	7E47670	GEAR (40)
12	31E8940	ARM
13	809E12000	SPRING
14	-	TRAY 2 HARNESS
15	110E5370	TRAY 2 PAPER FEED SENSOR (Q7) (REP 8.20)
16	120N287	ACTUATOR
17	9N1016	GROUND SPRING
18	121N411	TRAY 2 PAPER FEED SOLENOID (SOL 2) (REP 8.22)
19	-	SCREW (3X6)
20	7N742	CLUTCH PAWL
21	809E12010	CLUTCH PAWL SPRING
22	7N743	GEAR (18/26T)
23	7E29490	GEAR (16T)
24	110N817	TRAY 2 DETECT SWITCH (S5) (REP 8.21)
25	22N928	TRAY 2 FEED ROLLER (REP 8.25)
26	-	TRAY 2 FEED ASSEMBLY

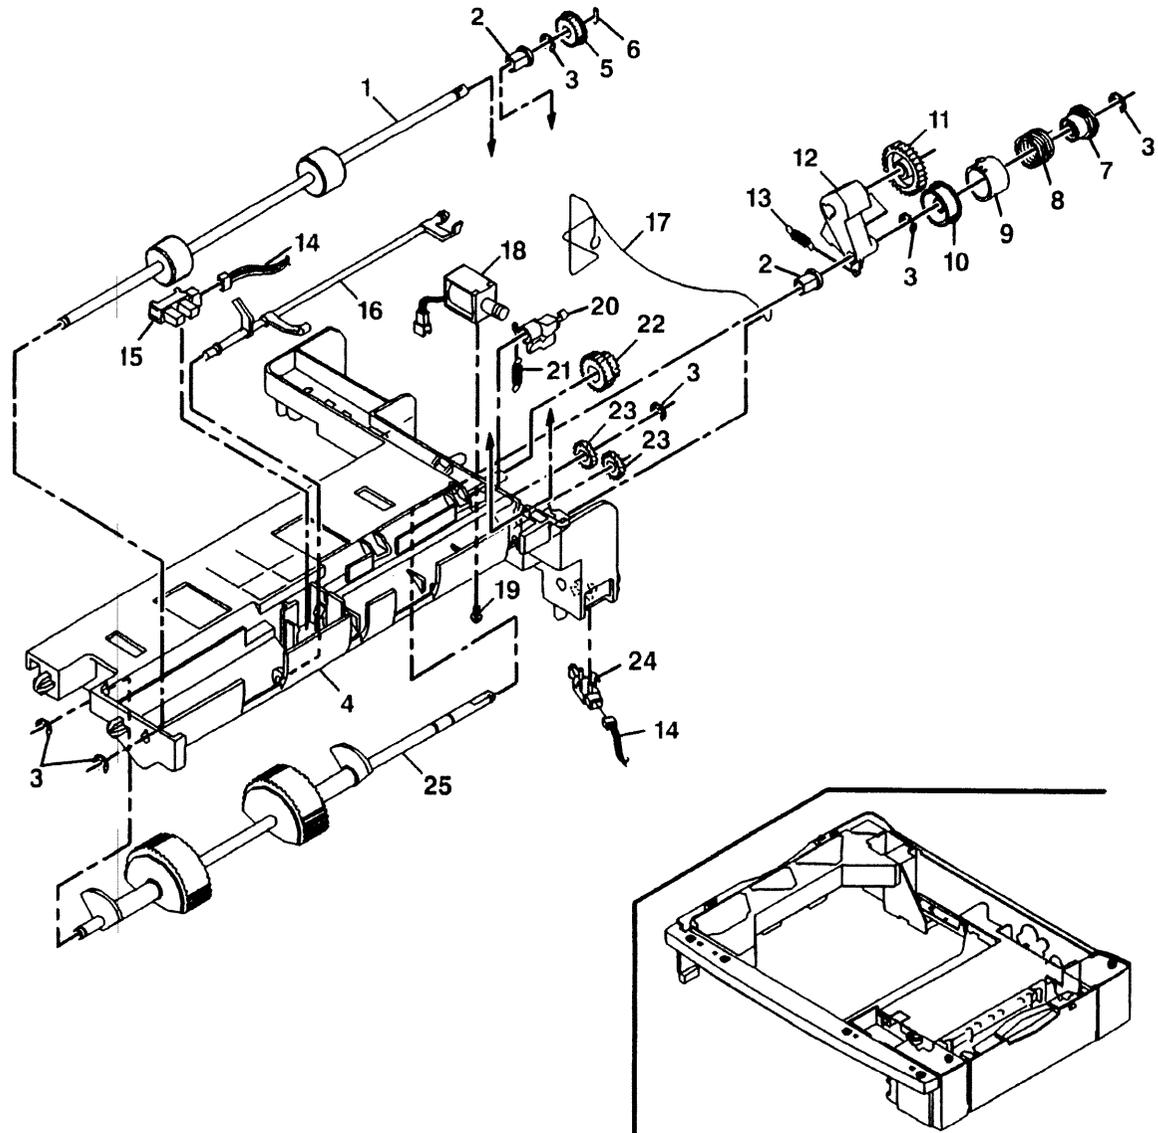

000028A-SKW


PL 6.1 ФЬЮЗЕР (1 ИЗ 2)

Item	Part	Description
1	-	PAPER GUIDE (REP 10.10)
2	-	RESISTOR (1/2 W)
3	-	GROUND WIRE
4	-	DISCHARGE BRUSH
5	-	END COVER
6	-	HEAT ROD SPRING (F)
7	-	FUSER UPPER FRAME
8	-	SCREW (3X6)
9	130E7840	THERMISTOR (RT1) (REP 10.4)
10	-	SCREW (3X10)
11	7N695	STRIPPER FINGER (REP 10.11)
12	130E9190	THERMOSTAT (REP 10.9)
13	140N5110	FUSER JAM SENSOR (Q3) (REP 10.5)
14	-	HEAT ROD SPRING (R)
15	-	END COVER (R)
16	152N1624	FUSER ASSEMBLY HARNESS (100V)
-	152N1661	HARNESS (230V)
17	-	TIE WRAP
18	-	RETAINING RING
19	7E14961	DRIVE GEAR (45T)
20	13E12780	BEARING
21	22E23440	HEAT ROLL (REP 10.2)
22	122N115	HEAT ROD (120V) (REP 10.8)
-	122N133	HEAT ROD (230V) (REP 10.8)
23	-	SCREW
24	126N58	FUSER ASSEMBLY (120V) (REP 10.1)
-	126N70	FUSER ASSEMBLY (230V) (REP 10.1)

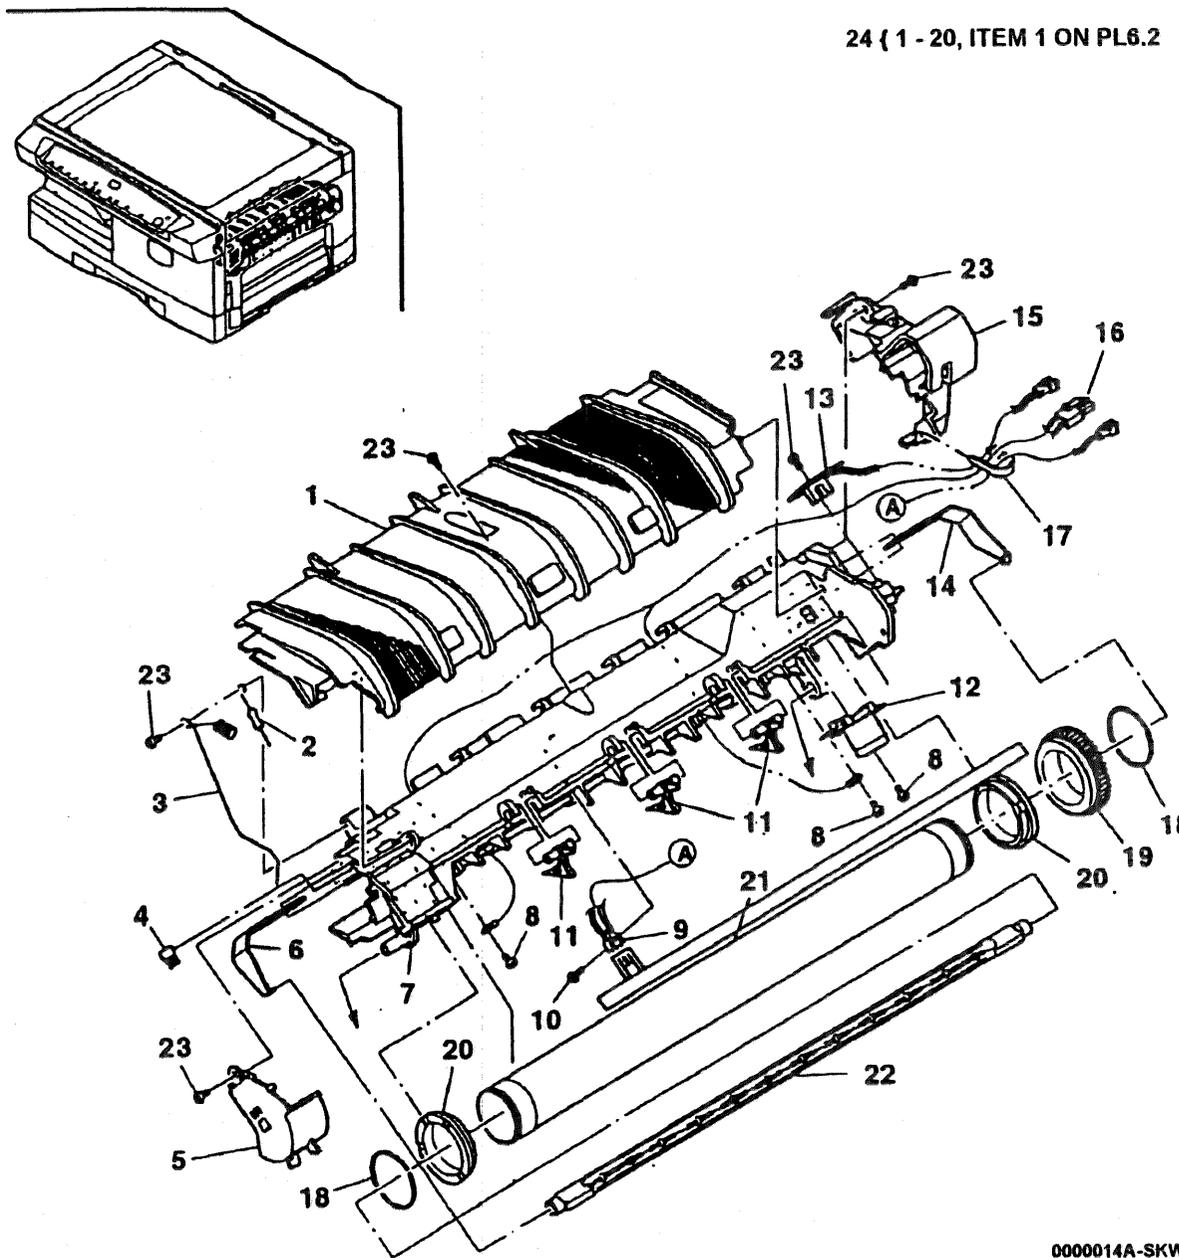

PL 6.3 ТРАНСПОРТЕР ВЫВОДА


Item	Part	Description
1	22N927	UPPER EXIT ROLLER
2	9N966	TENSION SPRING
3	-	PWB INSULATOR
4	140N5111	EXIT SENSOR (Q4) (REP 10.7)
5	120N275	SENSOR ACTUATOR
6	-	EXIT GUIDE
7	9N965	TENSION SPRING
8	22E22060	UPPER ROLLER
9	-	GROUNDING SPRING
10	152N1630	CONTROL CONSOLE RIBBON CABLE
11	-	FERRITE RETAINER
12	-	FERRITE

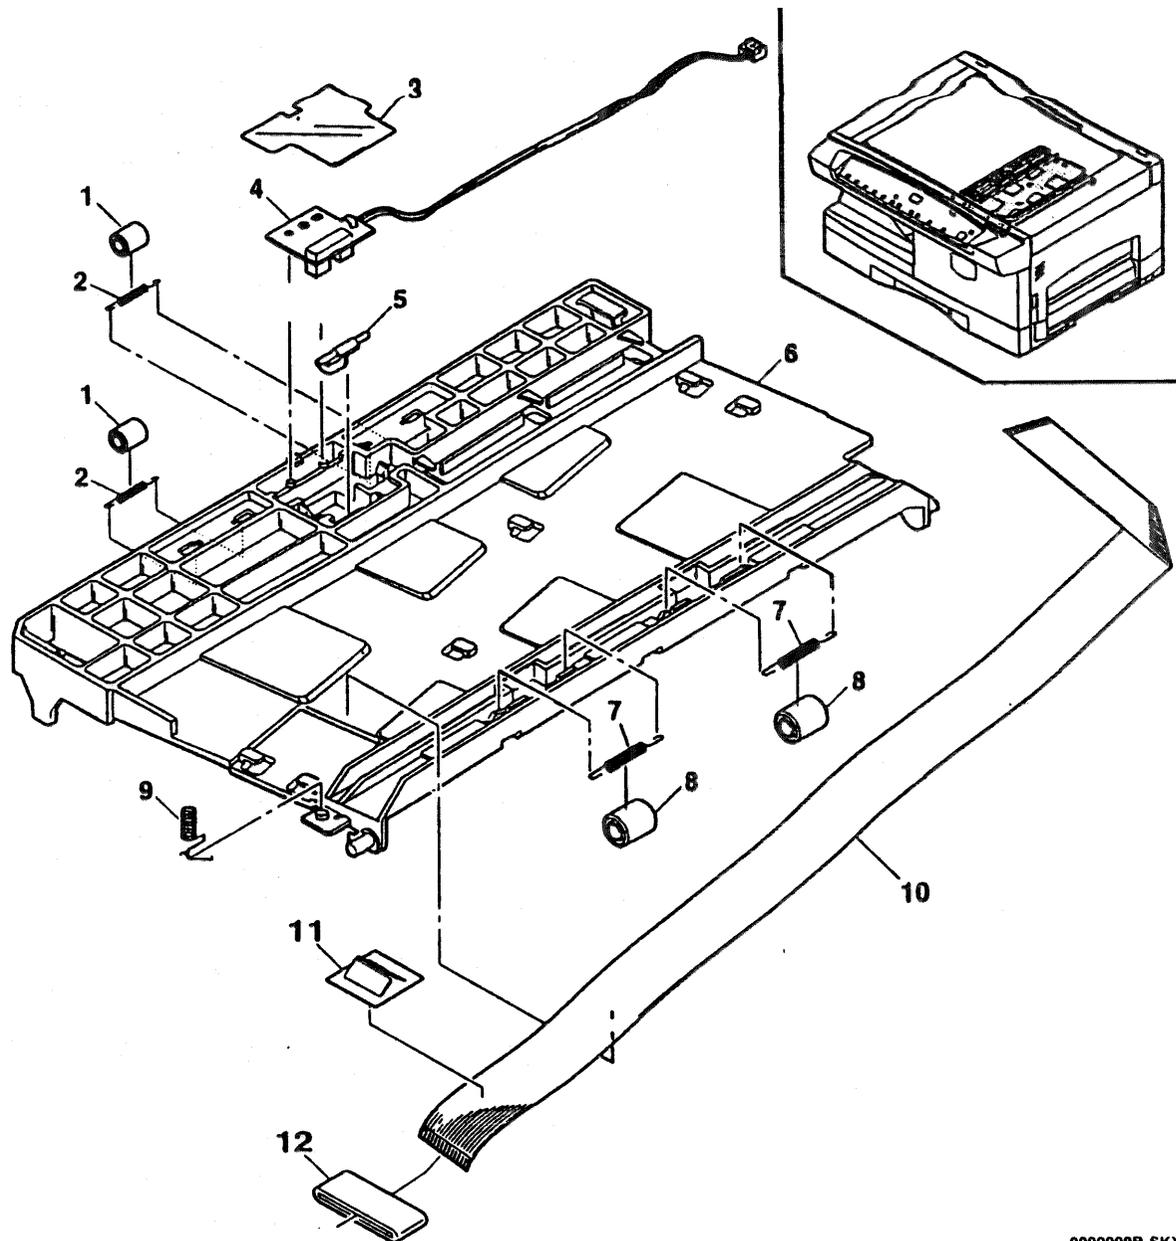

000009B-SKY

PL 7.1 ЭЛЕКТРИЧЕСКИЕ УЗЛЫ


Item	Part	Description
1	-	SCREW (3X6)
2	-	PWB COVER
3	-	CONNECTOR CAP
4	140N5114	GDI PWB
5	140N5113	GDI MEMORY PWB
6	152N1629	CENTER FRAME HARNESS (100V)
-	152N1662	(230V)
7	152N1626	FUSER HARNESS
8	140N5205	MAIN PWB (XD120F) (REP 1.1, ADJ 9.1 ADJ 9.2)
-	140N5116	MAIN PWB (10CPM)
-	140N5230	MAIN PWB (XD155DF)
-	140N5272	MAIN PWB (XD105F, XD103F)
-	108N367	FUSE
9	-	PWB MOUNTING BRACKET
10	-	SCREW (3X10)
11	-	SCREW (3X10)
12	152N1660	(230V)
-	152N1623	FUSER HEAT ROD HARNESS (120V)
13	140N5115	POWER SUPPLY PWB (120V) (PS1) (REP 1.2, ADJ 9.1 ADJ 9.2)
-	140N5117	(230V)
-	140N5207	(120V) (XD120F)
14	-	SCREW
15	-	SCREW (4X12)
16	-	STIFFENER BAR
17	-	BASE FRAME
18	-	RUBBER FOOT
19	-	2ND TRAY CONNECTOR COVER
20	-	2ND TRAY GEAR COVER
21	108E3660	FUSE (F1) (15A) (125V)
-	108E4370	FUSE (F1) (10A) (250V)
22	108N368	FUSE (F3) (5A) (125V)
-	108N369	FUSE (F3) (15A) (250V)
23	117E9750	POWER CORD (60HZ)
24	-	POWER RECEPTACLE (REP 1.4)
25	152N1652	GDI HARNESS
26	-	TIE WRAP (XD155DF)
27	-	FERRITE CORE (XD155DF)
28	130N911	DOCUMENT COVER CLOSED SENSOR (Q9) (XD155DF)

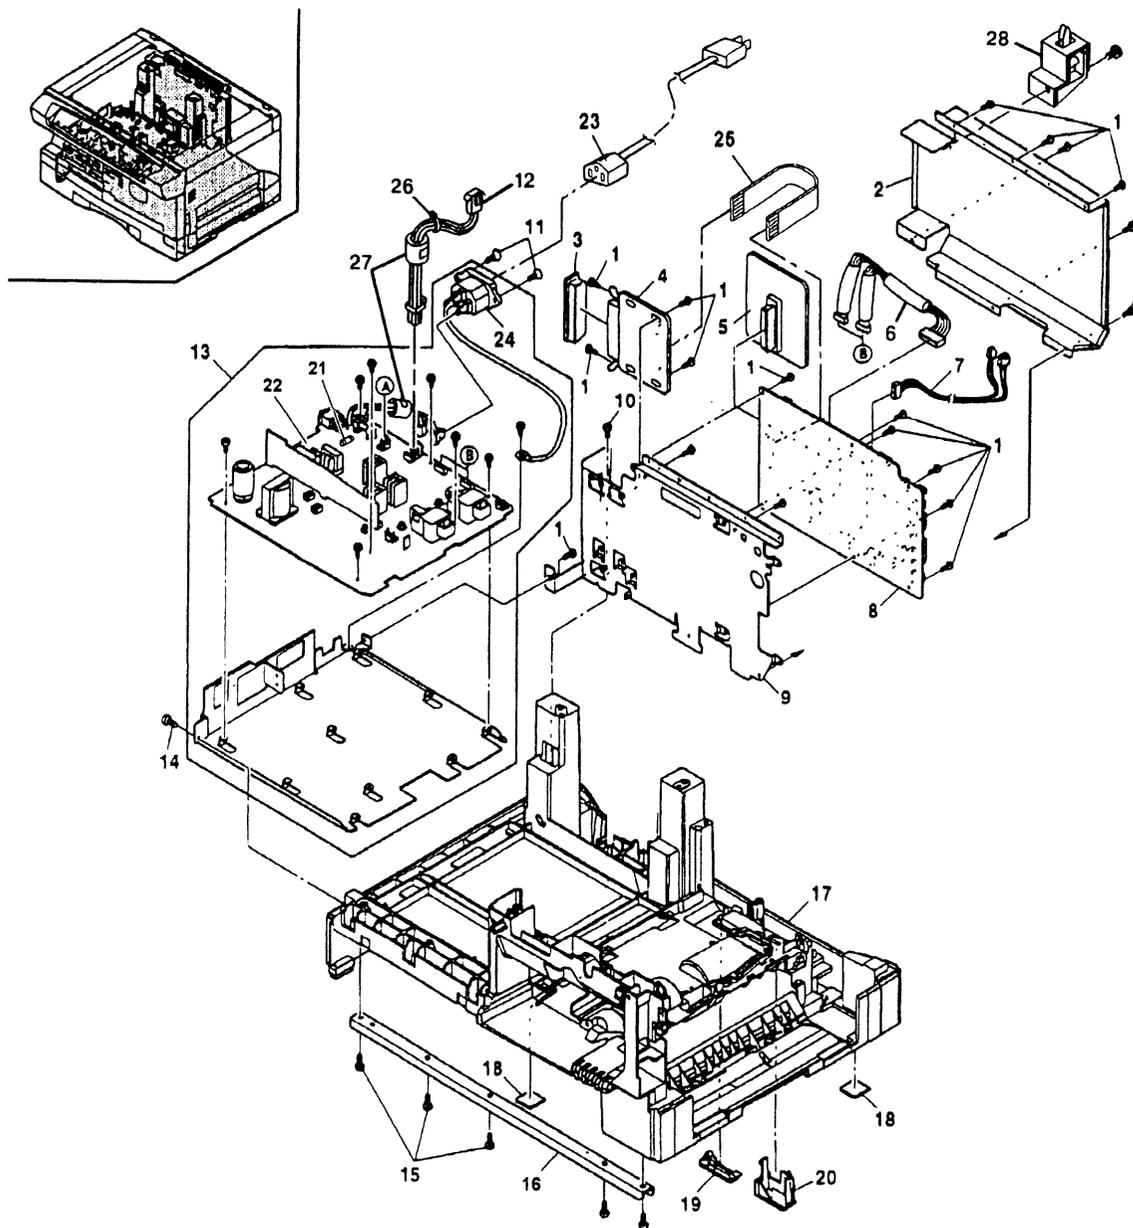

0000012C-SKW

PL 7.2 КОНТАКТНАЯ КРЫШКА
ПРИНТ-КАРТРИДЖА

Item	Part	Description
1	113N301	DRUM CARTRIDGE CONTACT HOUSING
2	152N1625	CHARGE COROTRON HARNESS
3	152N1622	GRID BIAS/MAIN PWB HARNESS
4	-	SCREW (3X6)
5	9N968	CONTACT SPRING
6	9N969	CONTACT SPRING
7	9N967	CONTACT SPRING
8	-	SCREW (3X8)

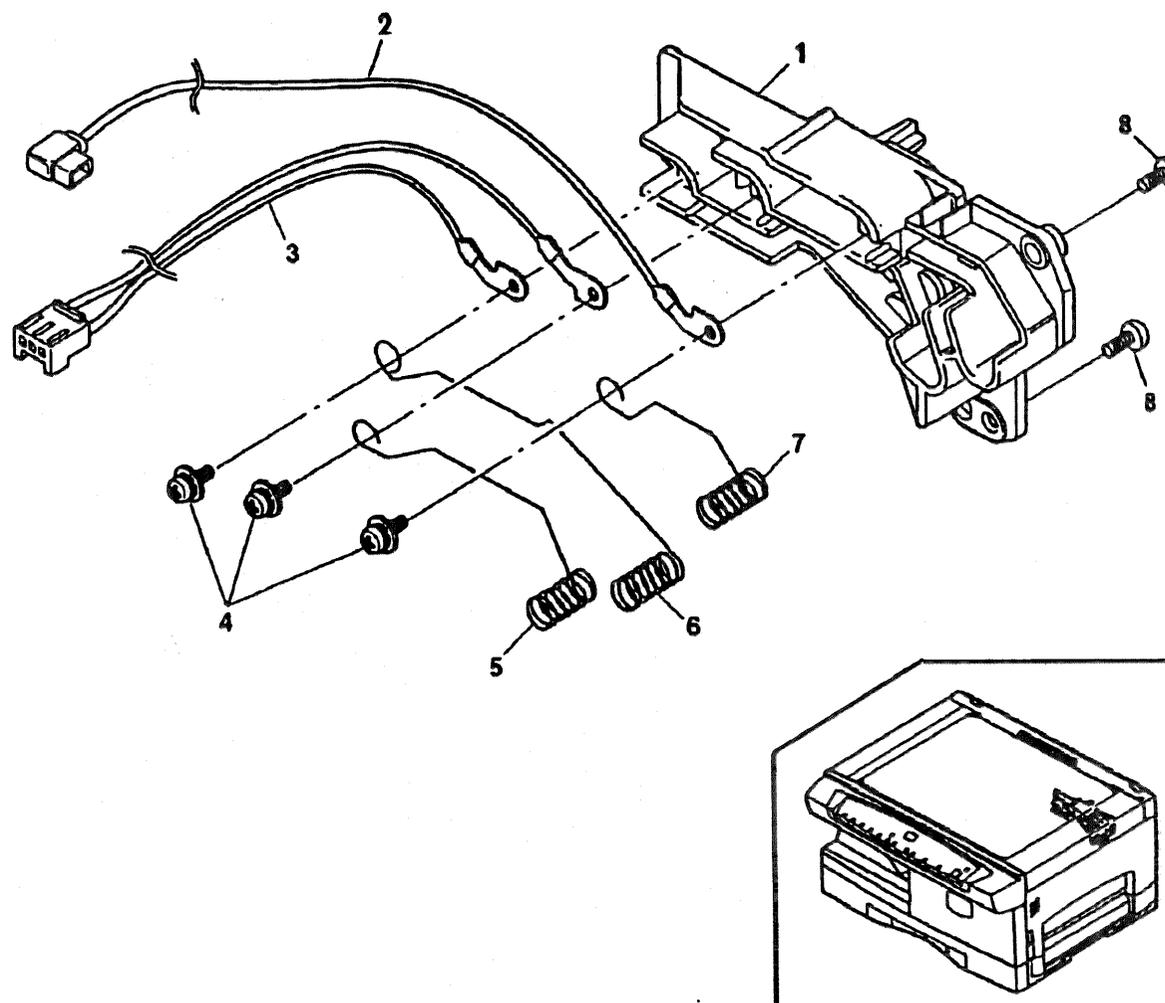


0000018A-SKW

PL 7.3 УЗЕЛ КОРОТРОНА ПЕРЕНОСА/ОТДЕЛЕНИЯ


Item	Part	Description
1	-	DETACK COROTRON
2	-	GUIDE
3	-	INSULATOR
4	-	FRONT GUIDE
5	-	SCREW (3X6)
6	-	CONTACT COVER (R)
7	-	TENSION SPRING
8	600K15950	TRANSFER COROTRON WIRE
9	-	SPRING BRACKET
10	-	TRANSFER COROTRON SPRING
11	-	BC SPRING
12	-	GROUNDING SPRING
13	-	CONTACT COVER (F)
14	-	COROTRON HOUSING
15	-	PLATE
16	-	GROUNDING PLATE
17	19N415	TRANSFER/DETACK COROTRON ASSEMBLY (REP 9.2)

17 { 1 - 16

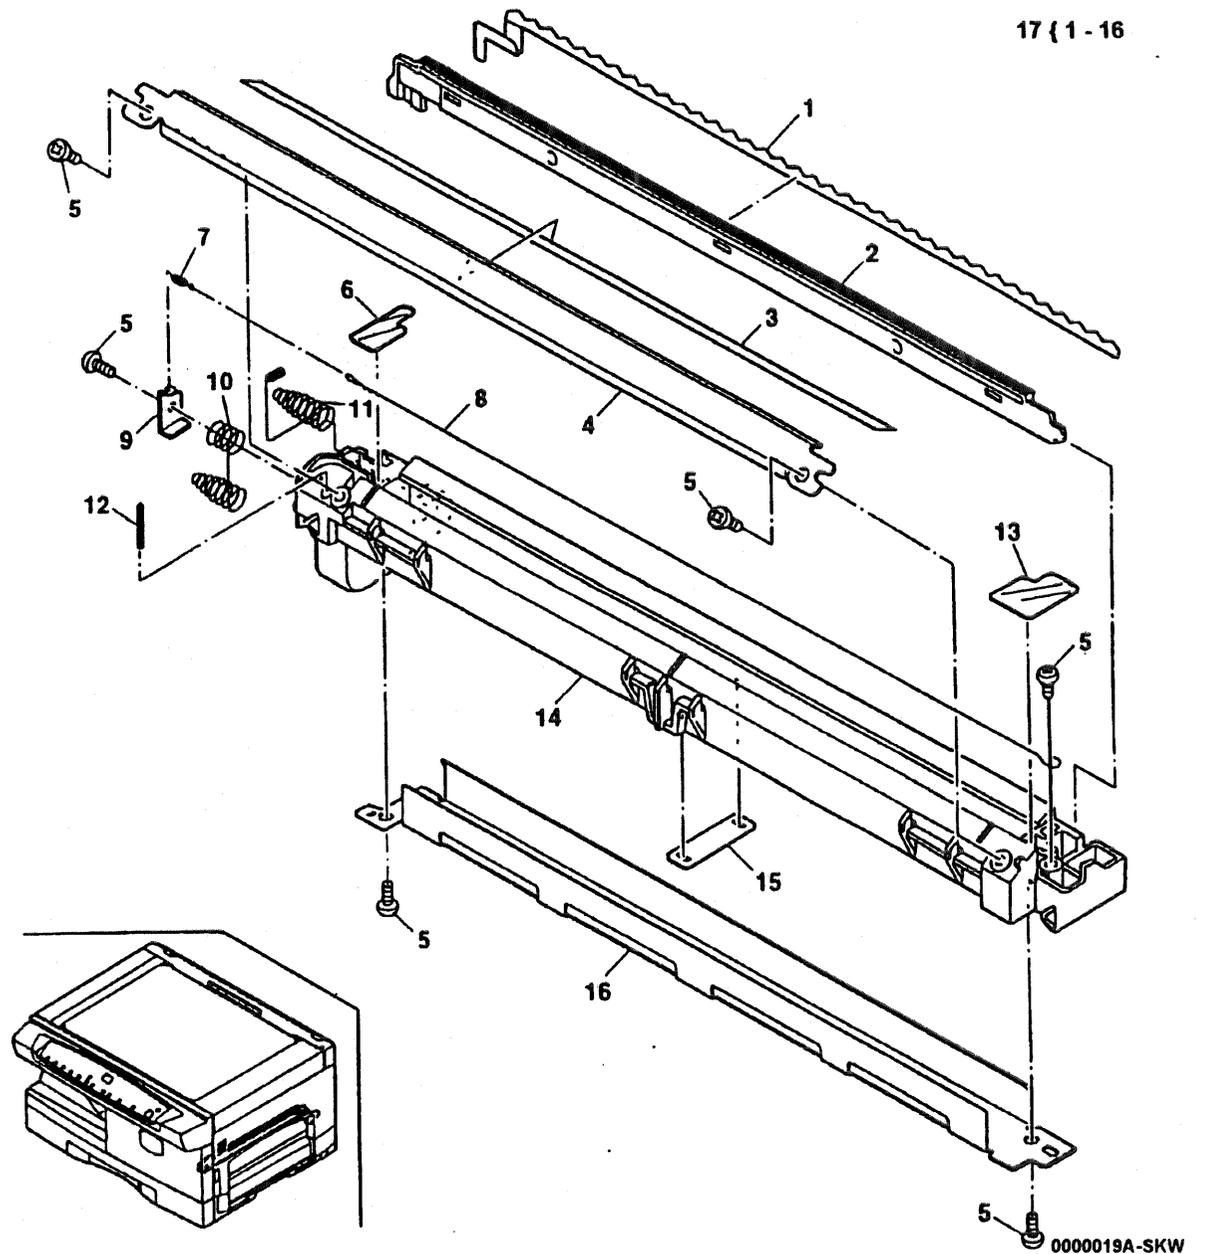

PL 7.4 ЖГУТЫ







Item	Part	Description
1	152N1631	CL LEAD HARNESS
2	152N1632	ICU-CCD HARNESS
3	152N1629	CENTER FRAME HARNESS (100V)
4	152N1630	OP HARNESS
5	152N1633	MAIN MOTOR HARNESS
6	152N1627	DVS HARNESS
7	-	PPD2 INTERFACE HARNESS
8	152N1623	HL HARNESS (100V)

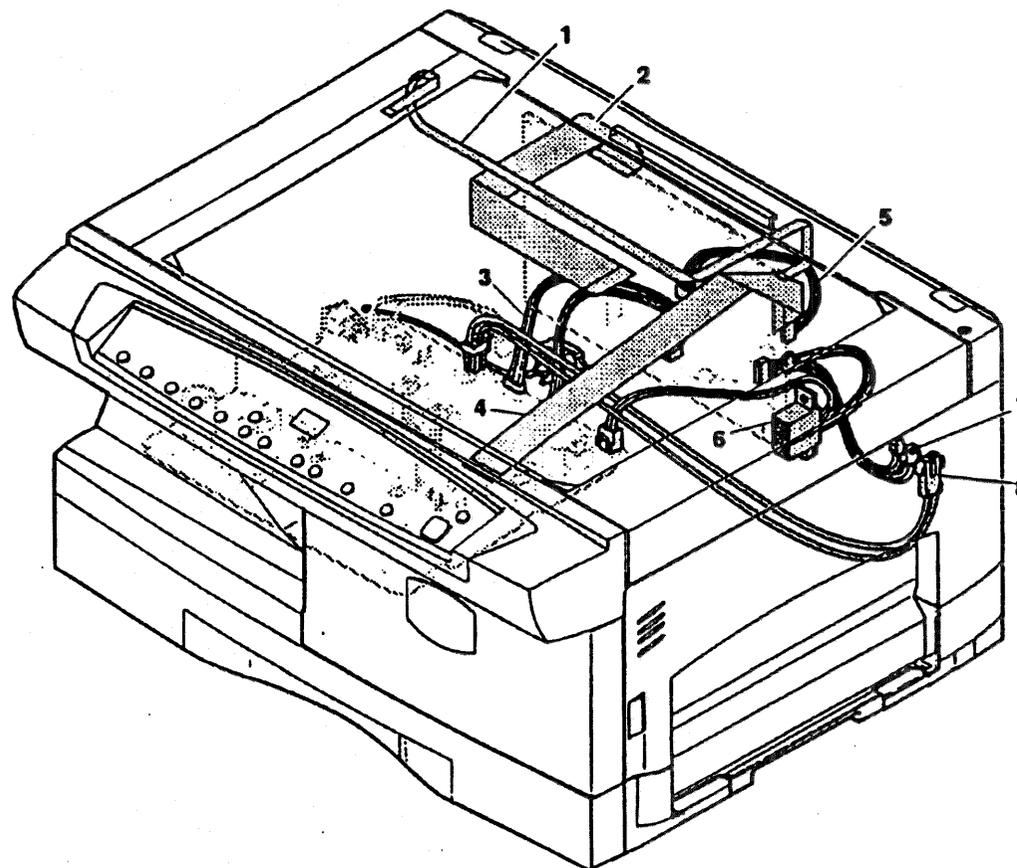

000025A-SKW

PL 8.1A УПАКОВКА И ПРИНАДЛЕЖНОСТИ








Item	Part	Description
1	-	TOP PACKING CUSHION (L)
2	-	TOP PACKING CUSHION (R)
3	-	POWER CORD
4	-	TIE WRAP
5	-	BAG
6	-	BAG
7	26E39240	HALF RATE CARRIAGE SHIPPING SCREW
-	701P98251	INSTRUCTIONS
8	-	SHIPPING STRAP
9	-	BOTTOM PACKING CUSHION
10	-	BOX
11	-	SHIPPING CUSHION
12	120E10520	THUMB SCREW
13	-	LABEL
14	-	DOCUMENT COVER CUSHION
15	7N696	PRESSURE BLOCK LEVER
16	117E18690	ALTERNATE
-	117E19340	PRINTER CABLE

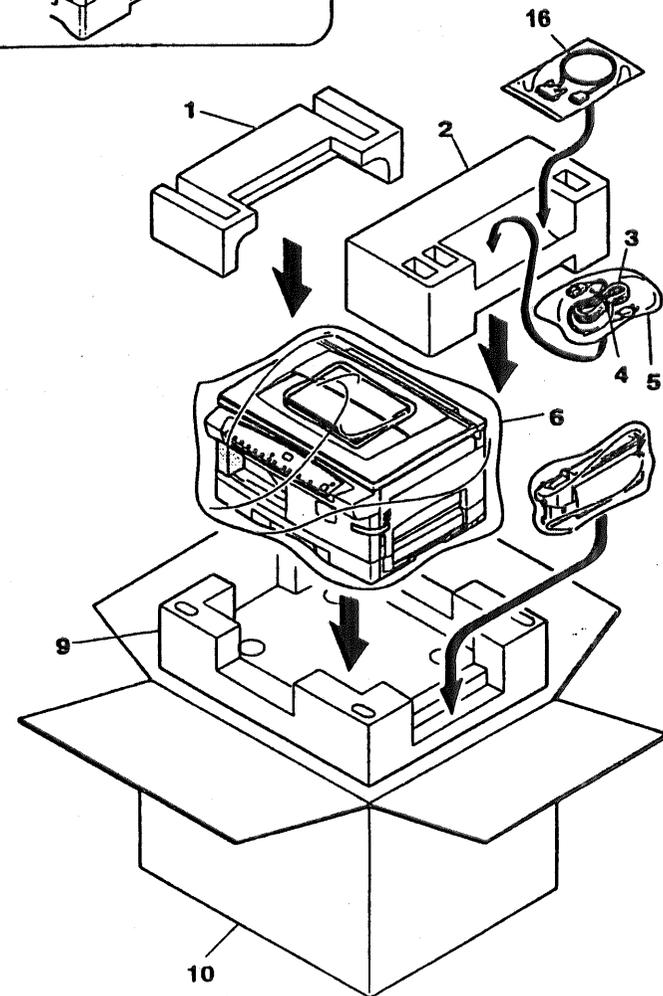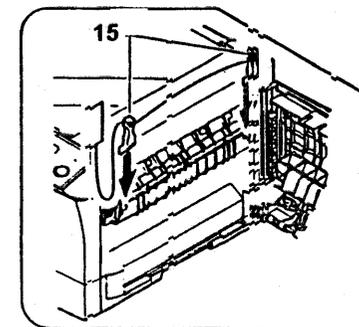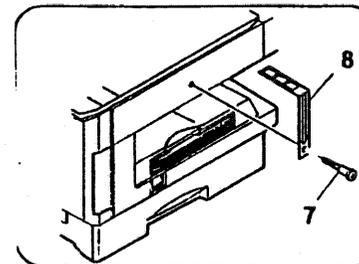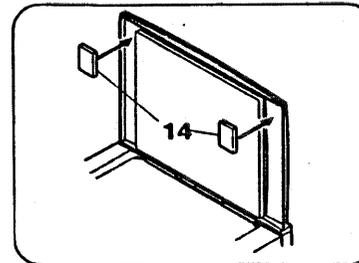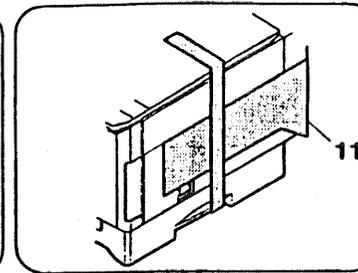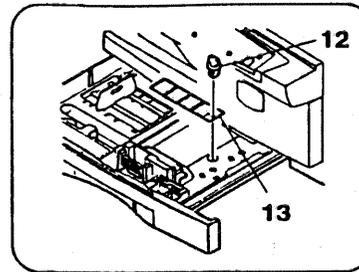

0000021B-SKW

PL 8.1B УПАКОВКА И ПРИНАДЛЕЖНОСТИ
(ТОЛЬКО XD155DF)


Item	Part	Description
1	-	TOP PACKING CUSHION (L)
2	-	TOP PACKING CUSHION (R)
3	-	POWER CORD
4	-	TIE WRAP
5	-	BAG
6	-	BAG
7	-	SHIPPING CUSHION
8	-	SHIPPING CUSHION
9	-	BOTTOM PACKING CUSHION
10	-	BOX
11	-	SHIPPING CUSHION
12	120E10520	THUMB SCREW
13	-	LABEL
14	-	DOCUMENT COVER CUSHION
15	-	SHIPPING STRAP
16	26E39240	HALF RATE CARRIAGE SHIPPING SCREW
17	7N696	PRESSURE BLOCK LEVER
18	117E18690	ALTERNATE
-	117E19340	PRINTER CABLE
19	-	PACKING CUSHION
20	-	PACKING CUSHION

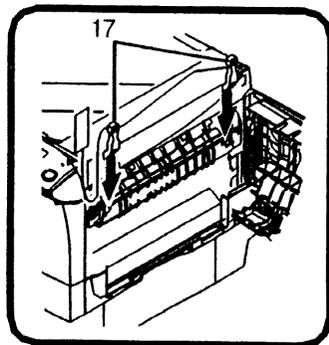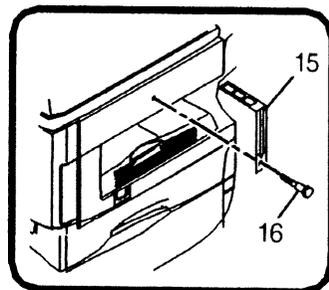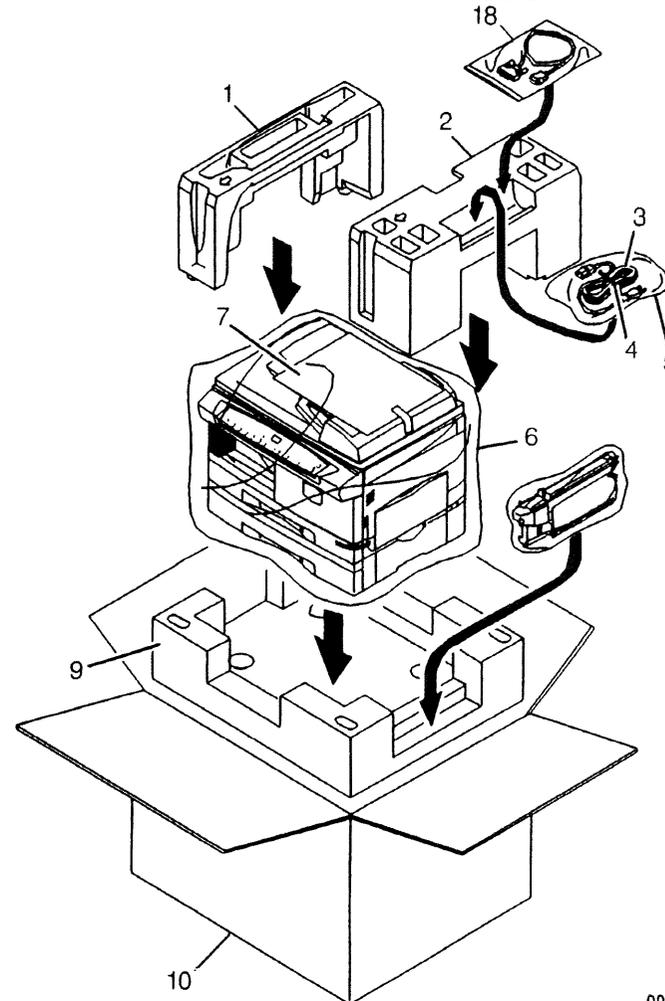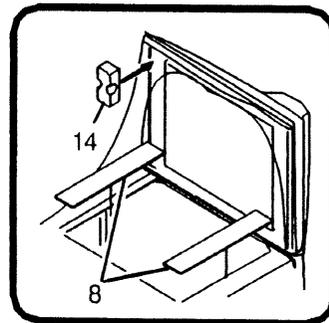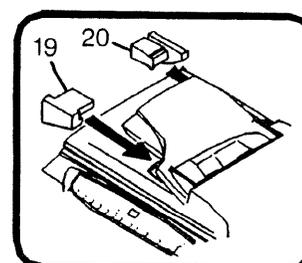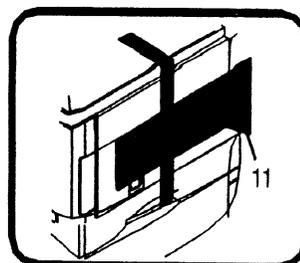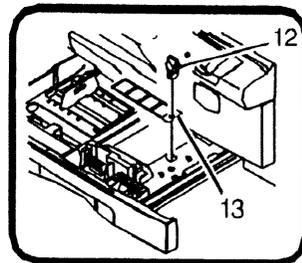

000034A-SKW

PL 8.2 ПРИНТ-КАРТРИДЖ И ТОНЕР-КАРТРИДЖ


Item	Part	Description
1	6R914	TONER CARTRIDGE
2	13R551	DRUM CARTRIDGE

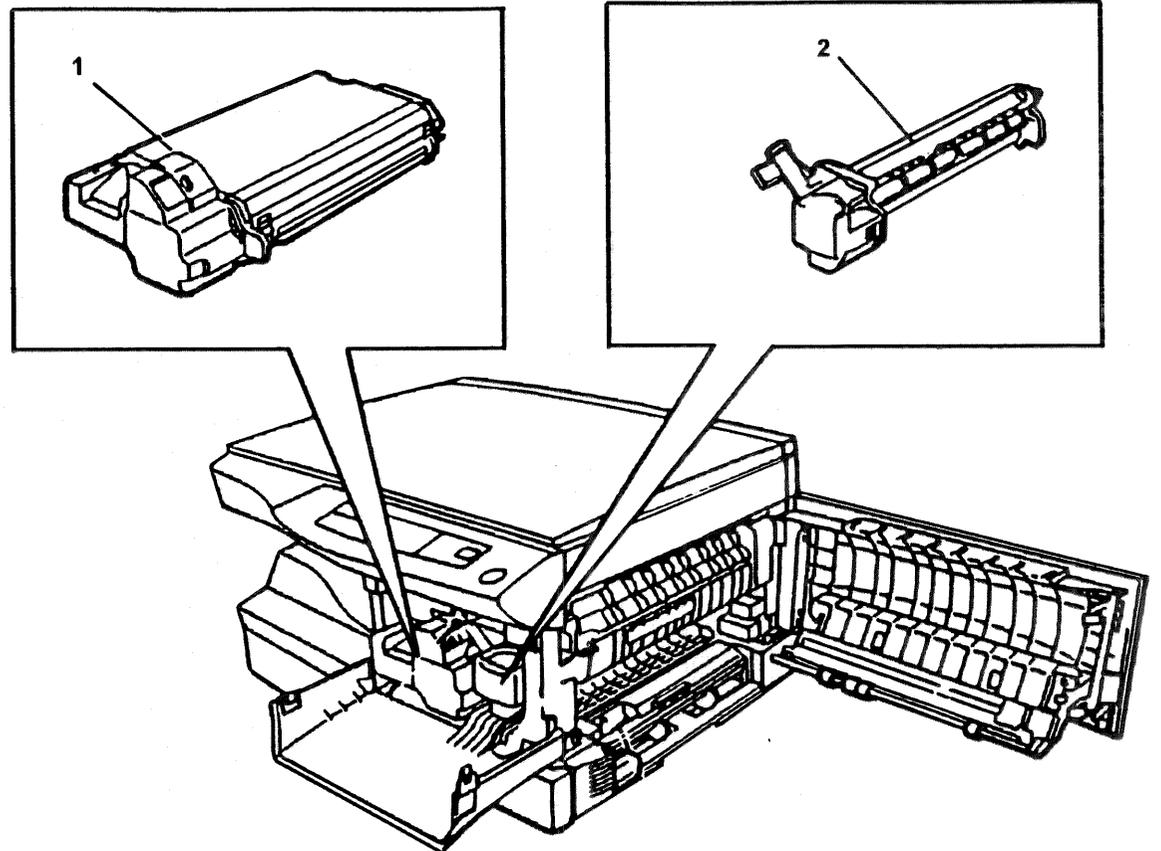

0000022A-SKW

PL 9.1A УЗЕЛ ДУПЛЕКСНОГО ПОДАТЧИКА КОМПЛЕКТА ОРИГИНАЛОВ
(DSDF)

Item	Part	Description
1	50N258	DOCUMENT TRAY
-	50N268	(XD103F, XD120F)
2	15N295	FRONT GUIDE
3	15N296	REAR GUIDE
4	7N737	FEED RACK
5	-	SCREW (3X8X)
6	7E52500	GEAR
7	15N297	SPRING
8	2N1562	LOWER COVER
9	50N274	DUPLEX TRAY (XD155DF)
10	2N1592	DSDF COVER (XD155DF)
11	-	SDF FEED ASSEMBLY
12	-	TIE WRAP
13	-	SCREW (4X10) SCREW (4X12) (XD155DF)
14	-	SCREW (4X10) SCREW (4X14) (XD155DF)
15	-	SCREW (4X10) SCREW (3X10) (XD155DF)
16	-	SCREW (3X6) (XD155DF)
17	121N419	DSDF DEFLECTION GATE SOLENOID (SOL3) (XD155DF) (REP 5.29)
18	11N409	LEVER (XD155DF)
19	9N1032	SPRING (XD155DF)
20	14N342	STOPPER (XD155DF)
21	38N255	MYLAR GUIDE
22	-	SCREW (3X14) (XD155DF)
23	-	MOTOR PAD (XD155DF)
24	-	SCREW (3X8) (XD155DF)
25	11N408	LEVER (XD155DF)
26	13E12570	BEARING (XD155DF)
27	-	E RING (XD155DF)
28	50N272	DSDF DEFLECTION GATE (XD155DF)
29	38N256	MYLAR GUIDE
-	38N273	MYLAR GUIDE (XD155DF)
30	50N257	BASE
-	50N275	BASE (XD155DF)
-	50N269	(XD103F, XD120F)
31	19N423	CUSHION (XD155DF)
32	22N992	SDF ASSEMBLY (REP 5.15)
-	22N999	(XD103F, XD120F) (XE)
-	22N1031	(XD155DF)

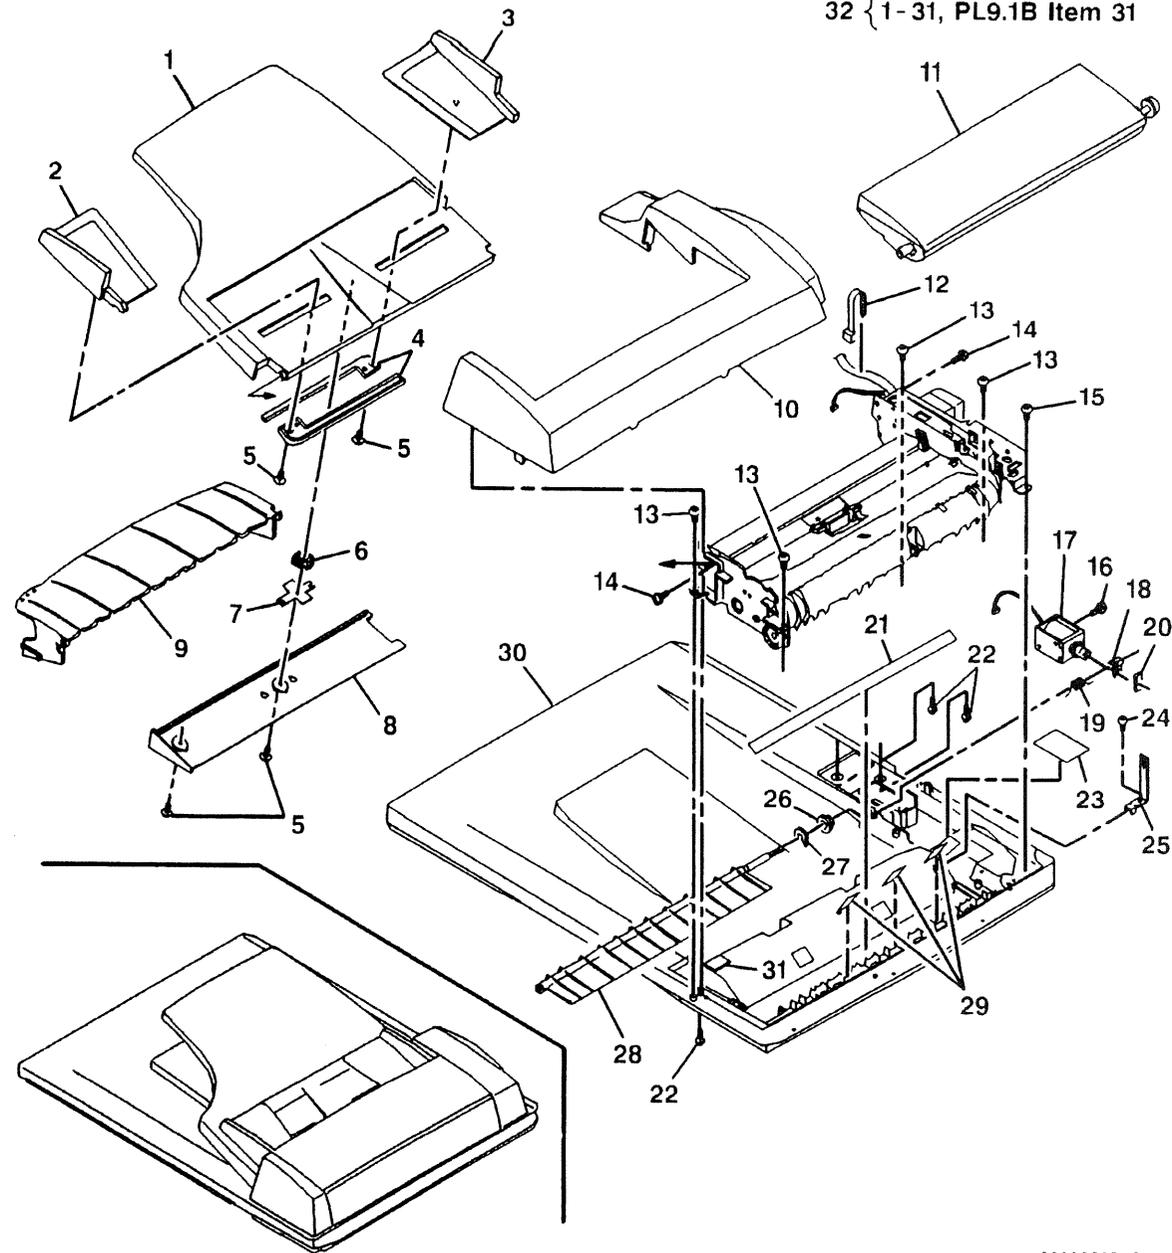


000029B-SKW

PL 9.1B УЗЕЛ ДУПЛЕКСНОГО ПОДАТЧИКА КОМПЛЕКТА ОРИГИНАЛОВ (DSDF)

31 { 1 - 30

Item	Part	Description
1	50N257	BASE
-	50N275	BASE (XD155DF)
2	4N192	DOCUMENT COVER CUSHION
3	-	SCREW (4X10) SCREW (4X14) (XD155DF)
4	3N682	HINGE LEFT
-	3N693	HINGE LEFT (XD155DF)
5	38N254	PAD
-	38N279	PAD (XD155DF)
6	-	E-RING (XD155DF)
7	22N976	SDF EXIT ROLLER (REP 5.10)
8	14N330	SPONGE
9	14N341	SPONGE (XD155DF)
10	6N890	EXIT SHAFT
-	6N901	EXIT SHAFT (XD155DF)
11	-	SCREW (3X8)
12	-	BEARING (XD155DF)
13	-	E-RING (XD155DF)
14	15N300	PRESSURE PLATE (XD155DF)
15	-	SCREW (3X10) (XD155DF)
16	9N1030	WRAP SPRING (F) (XD155DF)
17	9N1029	WRAP SPRING (R) (XD155DF)
18	9N1005	SPRING
-	9N1035	SPRING (XD155DF)
19	6N902	SHAFT (XD155DF)
20	22N973	SDF TRANSPORT ROLLER (REP 5.9)
21	6N889	TRANSPORT SHAFT
22	9N1004	SPRING
23	38N278	PAD (XD155DF)
-	-	PAD (REF: PL 9.1B item 5)
24	3N683	HINGE RIGHT
-	3N694	HINGE RIGHT (XD155DF)
25	9N1006	GROUND STRAP
-	15N299	GROUND STRAP (XD155DF)
26	-	SCREW (3X14) (XD155DF)
27	15N294	BASE PLATE
28	9N1028	GROUND SPRING (XD155DF)
29	-	SCREW (3X8)
30	9N1033	GROUND SPRING (XD155DF)
31	-	DSDF ASSEMBLY (BOTTOM)


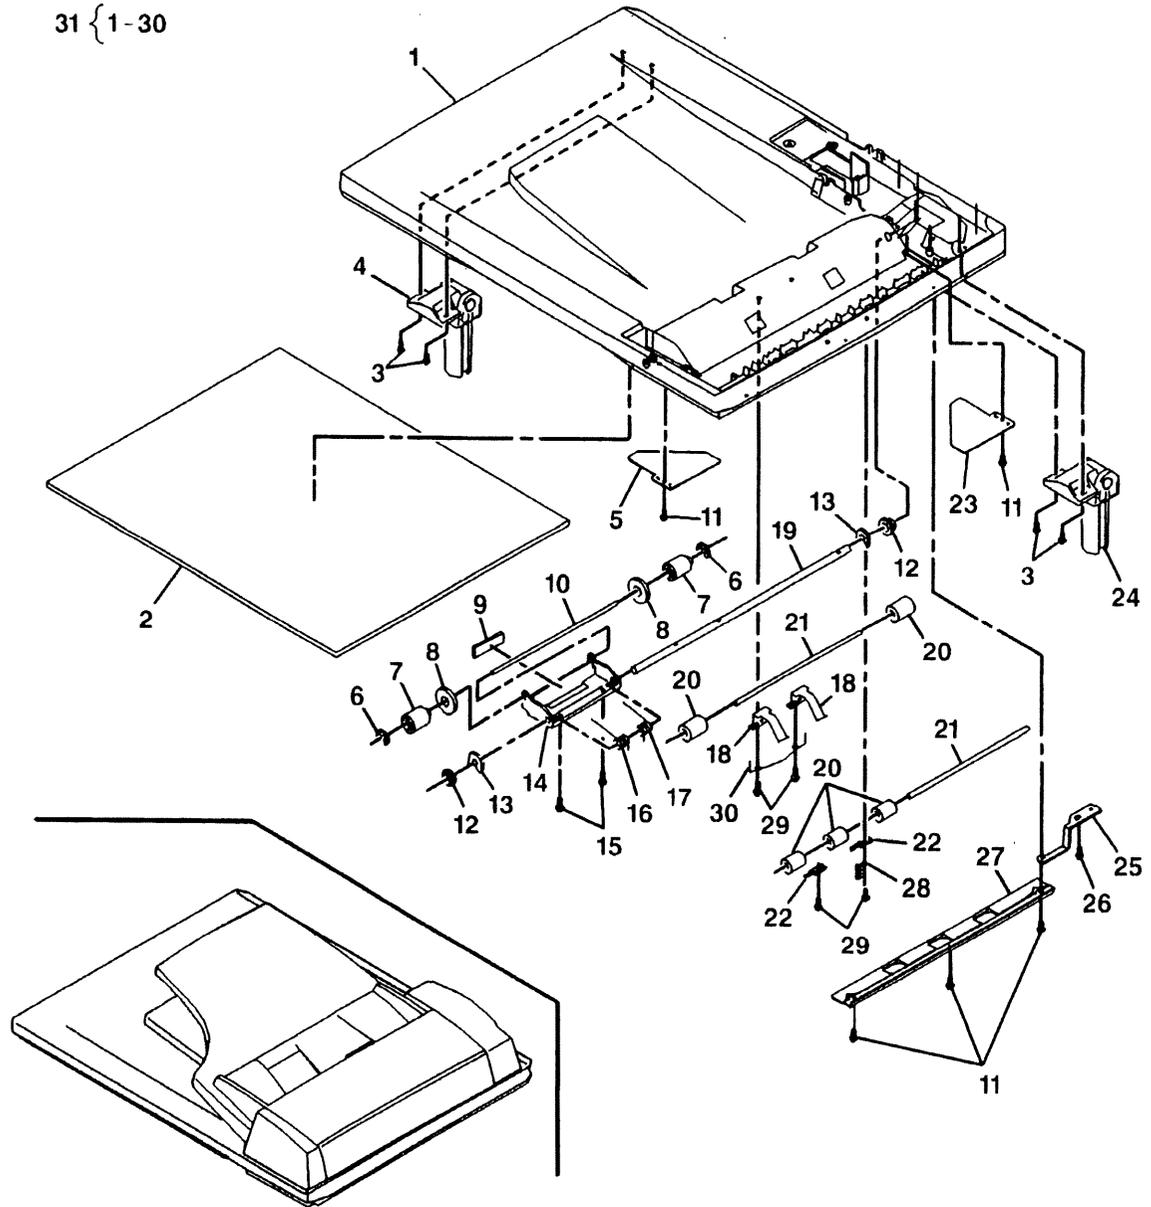


0000035A-SKW

PL 9.2 УЗЕЛ ПОДАЧИ SDF/DSDF

Item	Part	Description
1	2N1563	FEED ASSEMBLY TOP COVER
2	14N331	PAD
3	9N1010	PAPER GATE SPRING
4	31N161	ARM
5	3N686	PAPER GATE
6	-	SCREW (3X8)
7	140N5199	SDF SENSOR PWB (REP 5.16)
8	152N1656	SDF SENSOR HARNESS
9	120N284	SET DETECT ACTUATOR
10	120N285	SENSOR ACTUATOR
11	121N410	SDF FEED SOLENOID (SOL 1) (REP 5.17)
12	-	SCREW (3X4) SCREW (3X6) (XD155DF)
13	31N160	SOLENOID ARM
14	9N1009	SPRING
-	9N1037	SPRING (XD155DF)
15	-	E RING
16	7N738	CLUTCH GEAR (REP 5.18)
17	16N176	CLUTCH SLEEVE (REP 5.18)
18	9E57580	CLUTCH SPRING (REP 5.18)
19	5E9560	CAM BOSS (REP 5.18)
20	16E9640	BUSHING
21	6N892	CLUTCH SHAFT
22	9N1031	TENSION SPRING
23	20N464	20MXE PULLEY
24	-	E RING
25	9N1036	CLUTCH PAWL SPRING
26	7N739	CLUTCH PAWL
27	22N977	RETARD ROLLER (REP 5.19)
28	7E29490	GEAR (16T)
29	29N182	SPRING PIN
30	7E29480	GEAR (20T)
31	5E10560	FEED ROLLER (REP 5.19)
32	6N891	FEED SHAFT
33	9N1012	SPRING
34	31N162	ARM
35	1N280	LOWER COVER
36	-	SDF FEED ASSEMBLY (REP 5.22)


36 { 1-35

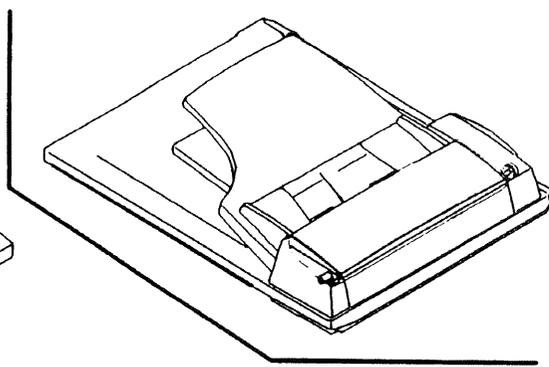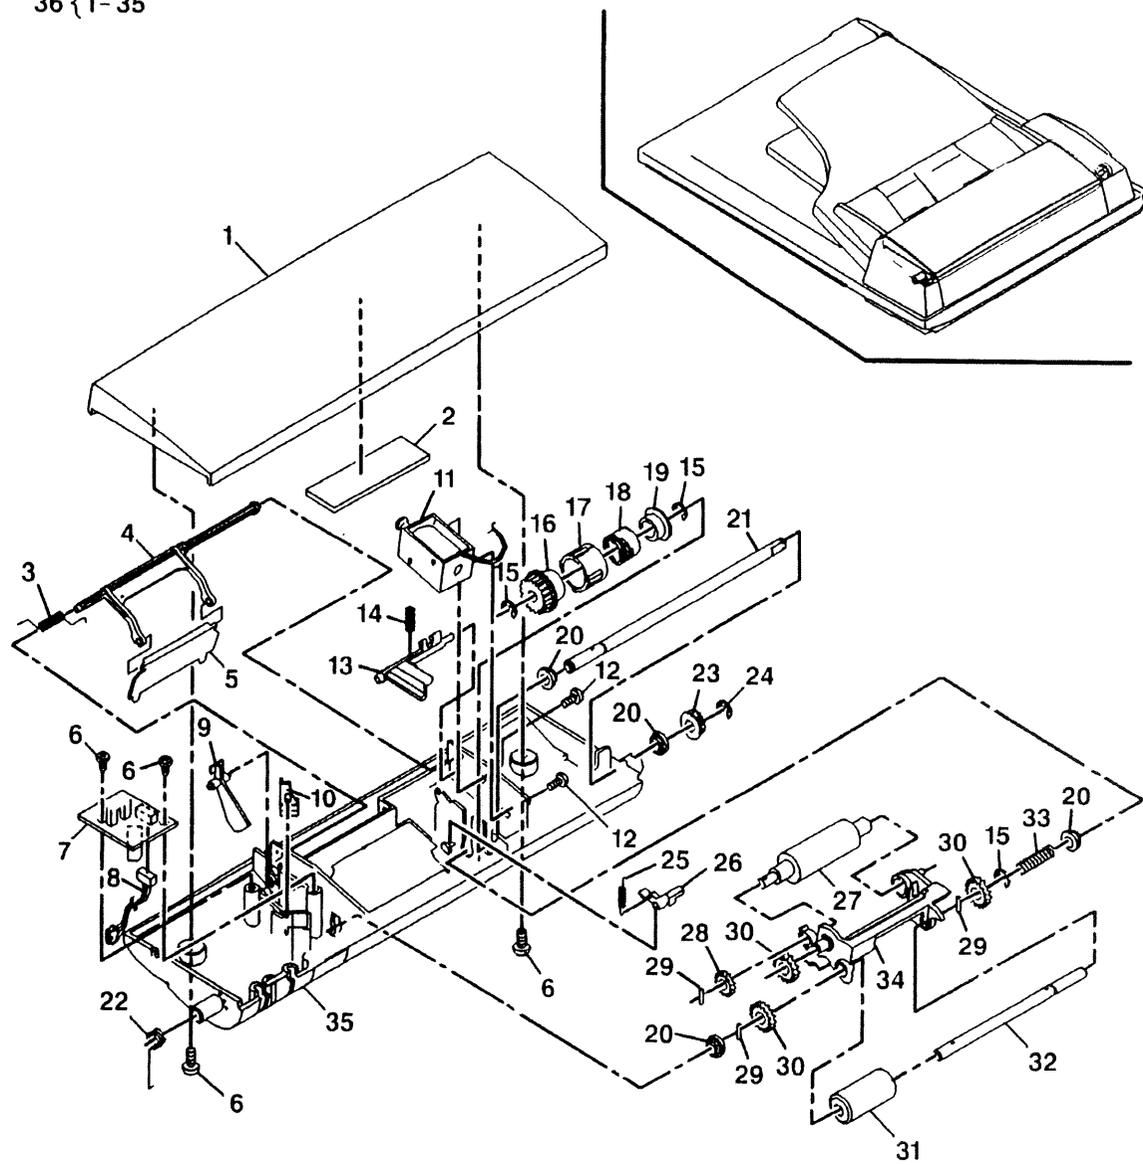

0000030A-SKW

PL 9.3 УЗЕЛ ТРАНСПОРТЕРА SDF/DSDF (XD120F)

Item	Part	Description
1	38N257	DOCUMENT GUIDE
-	38N264	(XD103F, XD120F)
2	-	SCREW (3X8)
3	26N524	SCREW
4	7E29260	GEAR (27T)
5	31N163	DRIVE ARM
6	-	SCREW (3X4)
7	127N988	SDF DRIVE MOTOR (MOT 1) (REP 5.7)
8	152N1658	GROUND WIRE
9	152N1657	SDF HARNESS
10	-	TIE WRAP
11	9N1071	SPRING
12	1N282	DRIVE FRAME
13	-	E RING
14	28E10220	WASHER
15	23N622	DRIVE BELT (83MXE4.8)
16	7N740	GEAR (48T/15T)
17	-	SPRING PIN (2-9)
18	13N378	BEARING
19	13E12570	BEARING
20	1N281	REAR FRAME
21	38N260	RETARD PAD
22	15N298	PRESSURE PLATE
23	9N1013	PRESSURE SPRING
24	7N741	FEED ASSEMBLY LATCH
25	38E13480	PAD
26	20E20740	PULLEY
27	23N623	TRANSPORT DRIVE BELT (REP 5.6)
28	3N687	PAPER ADVANCE KNOB
29	9N1014	EXIT GUIDE SPRING
30	38N258	SDF DOCUMENT TRANSPORT
31	130N854	SDF DOCUMENT PATH SENSOR (Q3) (REP 5.8)
32	22N979	ROLLER, EXIT
33	42N77	DISCHARGE BRUSH
34	38N259	DOCUMENT GUIDE
35	38N261	REFLECTOR
36	22N978	TRANSPORT ROLLER
37	2N1564	SDF FRONT COVER
-	2N1573	(XD103F, XD120F) (XE)
38	2N1565	SDF REAR COVER

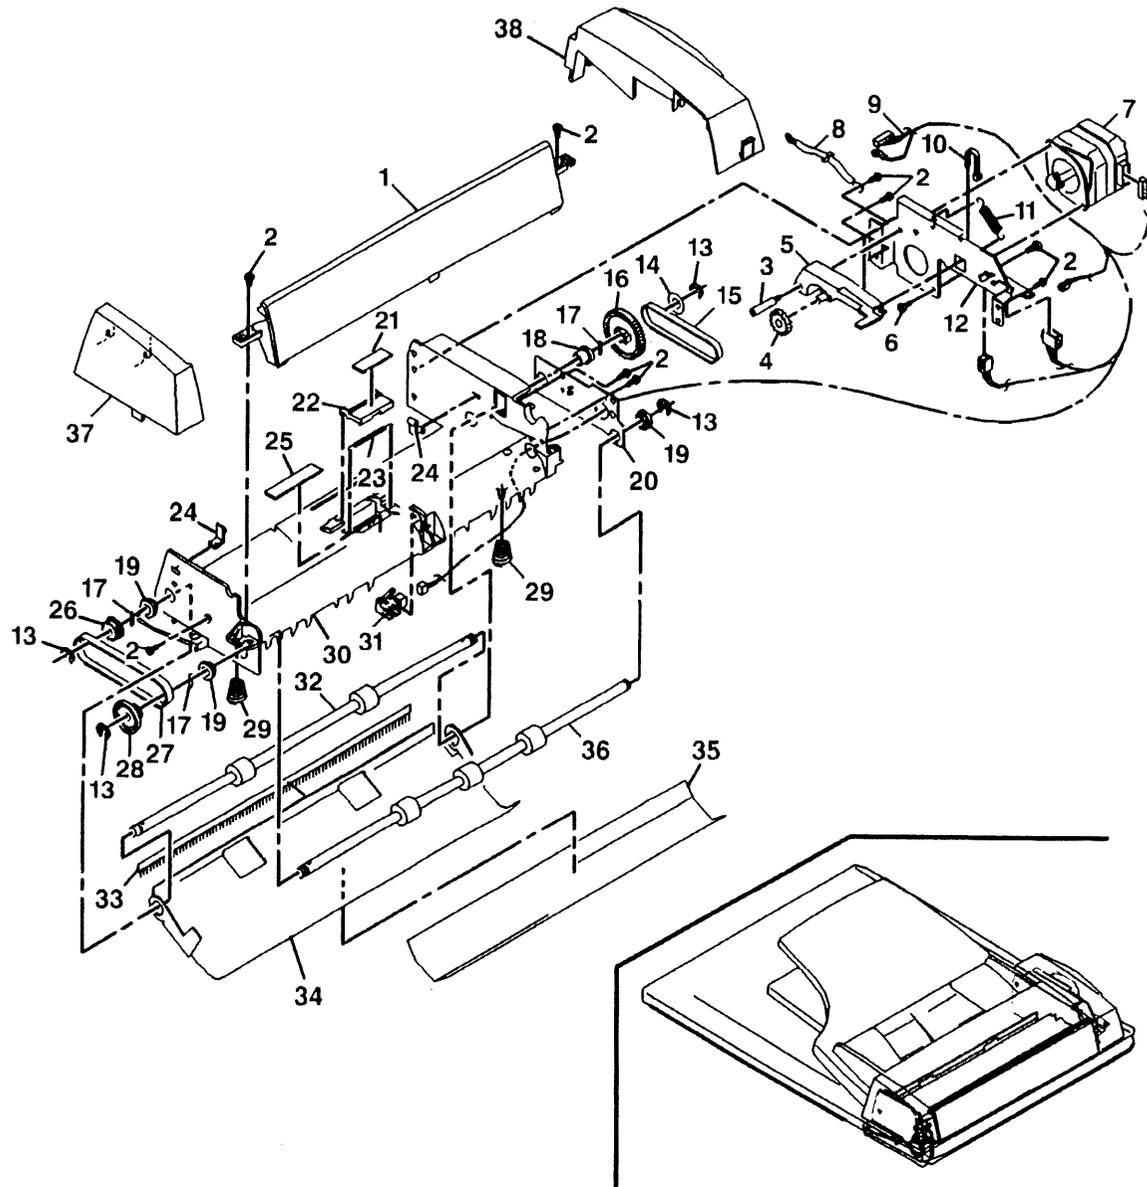


0000031A-SKW

PL 9.4 УЗЕЛ ТРАНСПОРТЕРА ДУПЛЕКСНОГО ПОДАТЧИКА
КОМПЛЕКТА ОРИГИНАЛОВ (DSDF) (XD155DF)

45 { 1-44

Item	Part	Description
1	38E13480	PAD
2	38N260	RETARD PAD
3	15N298	PRESSURE PLATE
4	9N1013	PRESSURE SPRING
5	38N271	UPPER PAPER GUIDE
6	22N1001	DSDF EXIT ROLLER (REP 5.25)
7	42N77	DISCHARGE BRUSH
8	38N269	LOWER PAPER GUIDE
9	-	SCREW (3X8)
10	38N272	DOCUMENT GUIDE
11	152N1664	SDF HARNESS
12	-	SCREW (3X6)
13	127N988	SDF DRIVE MOTOR (MOT1) (REP 5.20)
14	14N342	PAD
15	121N420	DSDF EXIT ROLL SOLENOID (SOL2) (REP 5.24)
16	-	TIE WRAP
17	1N288	DRIVE FRAME
18	-	SCREW (3X4)
19	-	SCREW (3X5)
20	-	E-RING
21	28E10220	WASHER
22	23N636	DRIVE BELT
23	7N740	GEAR (48T/15T)
24	-	SPRING PIN
25	13E12570	BEARING
26	7N752	GEAR (30T)
27	13N378	BEARING
28	121N418	DSDF TRANSPORT ROLL CLUTCH (CL1) (REP 5.31)
29	-	E RING
30	1N287	ALL
31	7N741	OPEN & SHUT LOCK SPRING
32	-	SCREW (3X12)
33	20E20740	Y 22MXE PULLEY
34	23N635	TRANSPORT DRIVE BELT
35	3N687	PAPER RELEASE KNOB
36	9N1014	EXIT GUIDE SPRING
37	130N854	SDF DOCUMENT PATH SENSOR (Q3) (REP 5.21)
38	38N270	SDF DOCUMENT TRANSPORT
39	50N273	DUPLX GATE
40	22N1000	DUPLX TRANSPORT ROLLER (REP 5.27)
41	38N268	DOCUMENT GUIDE
42	-	REFLECTOR
43	22N978	TRANSPORT ROLLER (REP 5.26)
44	-	SLEEVE
45	-	TRANSPORT ASSEMBLY (REP 5.23)

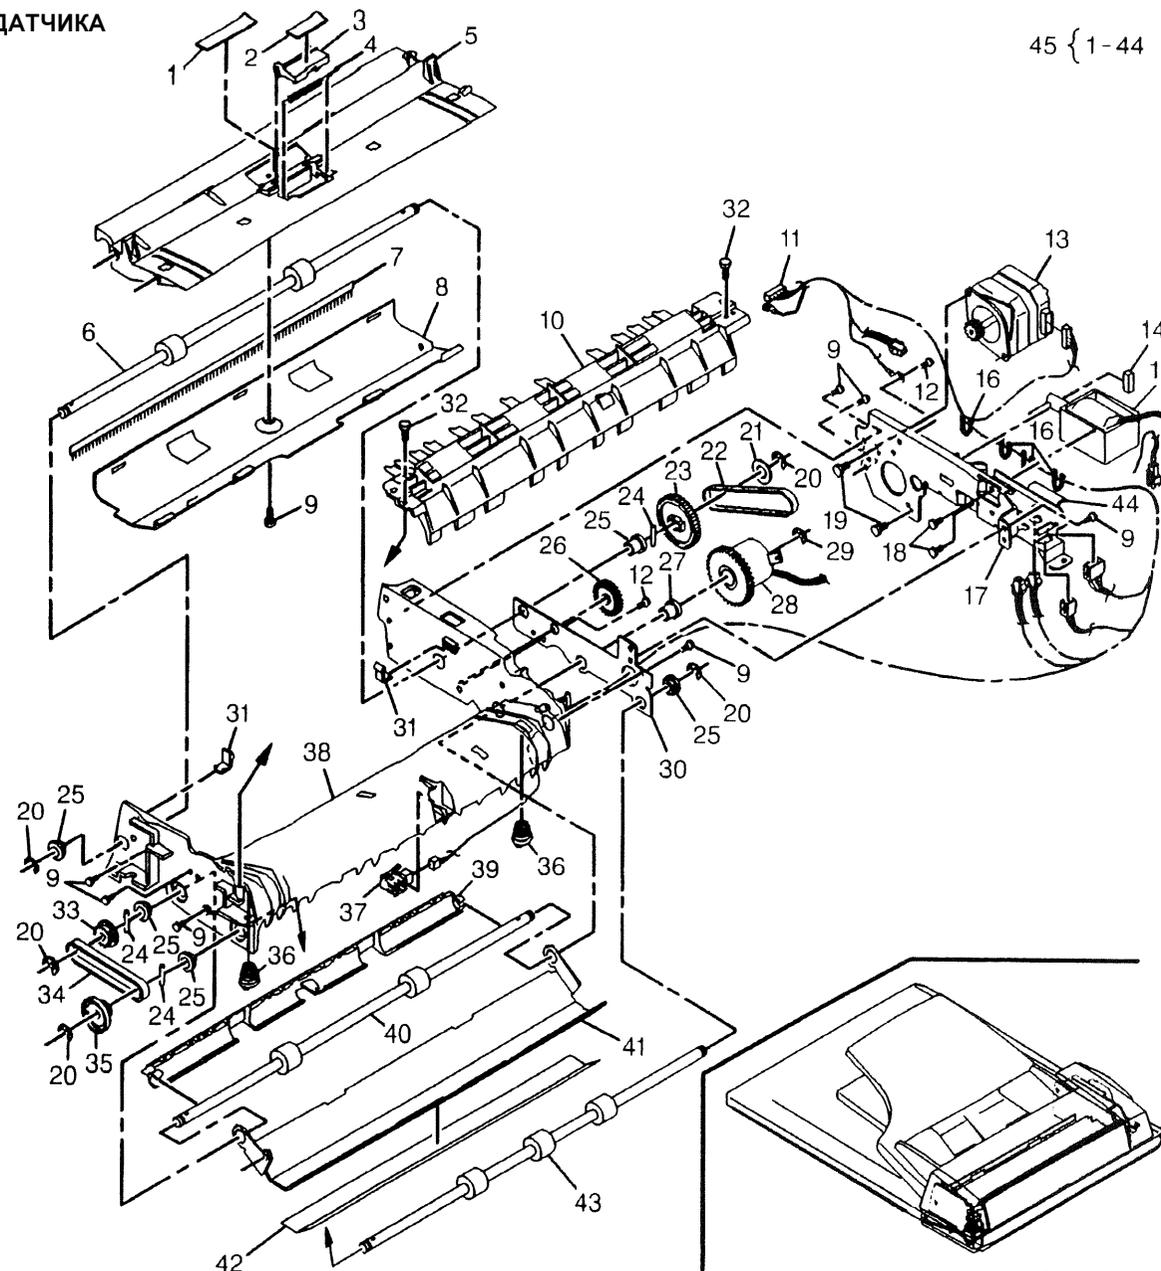

000037A-SKW